


# Inline/Piggable Modular Color Changer



**MODEL: A12800-XX**

**IMPORTANT:** Before using this equipment, carefully read **SAFETY PRECAUTIONS**, starting on page 1, and all instructions in this manual. Keep this Service Manual for future reference.

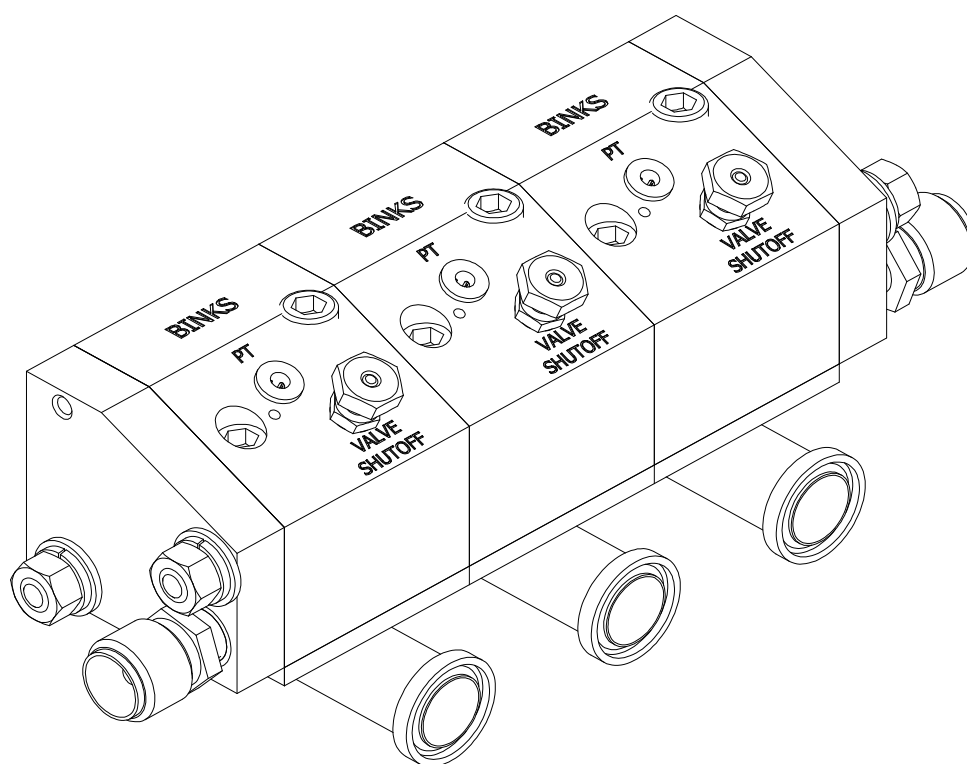

# CONTENTS

|   |              |
|---|--------------|
| <b>Section 1: SAFETY</b>                      | <b>5-9</b>   |
| Safety Precautions                            |              |
| Hazards / Safeguards                          |              |
| <hr/>   |              |
| <b>Section 2: INTRODUCTION</b>                | <b>10-14</b> |
| General Description                           |              |
| Pre-Engineered Color Changer Assemblies       |              |
| Color Changer Assembly Model                  |              |
| Identification / Parts List                   |              |
| <hr/>   |              |
| <b>Section 3: INSTALLATION</b>                | <b>15-16</b> |
| PCC Installation Procedures                   |              |
| <hr/>   |              |
| <b>Section 4: OPERATION</b>                   | <b>17-19</b> |
| Color Changer Schematics                      |              |
| Grounding of the Color Changer                |              |
| Fluid Inlet and Outlet Fittings               |              |
| Air Pilot Hose                                |              |
| Fluid Output Hose                             |              |
| Assembly with Purge Block                     |              |
| Assembly with No Purge Block                  |              |
| <hr/>   |              |
| <b>Section 5: MAINTENANCE</b>                 | <b>20-24</b> |
| Micro-Valve and Valve Seat Replacement        |              |
| Test and Checkout Procedure for Color Changer |              |
| Tools and Optional Equipment                  |              |
| Recommended Spare Parts                       |              |
| <hr/>   |              |
| <b>Section 6: WARRANTY POLICIES</b>           | <b>25</b>    |
| Limited Warranty                              |              |



# Section 1: SAFETY

Before operating, maintaining or servicing any Binks electrostatic coating system, read and understand all of the technical and safety literature for your Binks products. This manual contains information that is important for you to know and understand.

This information relates to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS. To help you recognize this information, we use the following symbols:



**CAUTION** - states information that tells how to prevent damage to equipment or how to avoid a situation that might cause minor injury.



**WARNING** - states information to alert you to a situation that might cause serious injury if instructions are not followed.

While this manual lists standard specifications and service procedures, some minor deviations may be found between the literature and your equipment. Differences in local codes and plant requirements, material delivery requirements, etc., make such variations inevitable. Compare this manual with your system installation drawings and appropriate Binks equipment manuals to reconcile such differences.



Careful study and continued use of this manual will provide a better understanding of the equipment and process, resulting in more efficient operation, longer trouble-free service and faster, easier troubleshooting. If you do not have the manuals and safety literature for your Binks system, contact your local Binks representative or Binks.





## WARNING


- The user **MUST** read and be familiar with the Safety Section in this manual and the Binks safety literature therein identified.
- This manual **MUST** be read and thoroughly understood by **ALL** personnel who operate, clean or maintain this equipment! Special care should be taken to ensure that the WARNINGS and safety requirements for operating and servicing the equipment are followed. The user should be aware of and adhere to **ALL** local building and fire codes and ordinances as well as NFPA 33 SAFETY STANDARD, 2009 EDITION, prior to installing, operating, and/or servicing this equipment.
- The hazards shown on the following pages may occur during normal use of this equipment. Please read the hazard chart beginning on page 6.

| AREA   | HAZARD  | SAFEGUARDS   |
|--|---|--|
| <p data-bbox="175 212 310 239"><b>Spray Area</b></p>  | <p data-bbox="574 212 709 239"><b>Fire Hazard</b></p> <p data-bbox="410 260 841 350">Improper or inadequate operation and maintenance procedures will cause a fire hazard.</p> <p data-bbox="410 422 870 609">Protection against inadvertent arcing that is capable of causing fire or explosion is lost if any safety interlocks are disabled during operation. Frequent power supply shutdown indicates a problem in the system requiring correction.</p> | <p data-bbox="1062 212 1344 239"><b>Follow These Guidelines</b></p> <p data-bbox="912 260 1458 319">Fire extinguishing equipment must be present in the spray area and test periodically.</p> <p data-bbox="912 390 1495 449">Spray areas must be kept clean to prevent the accumulation of combustible residues.</p> <p data-bbox="912 520 1438 548">Smoking must never be allowed in the spray area.</p> <p data-bbox="912 619 1458 678">The high voltage supplied to the atomizer must be turned off prior to cleaning, flushing or maintenance.</p> <p data-bbox="912 749 1268 777">When using solvents for cleaning:</p> <ul data-bbox="912 798 1474 974" style="list-style-type: none"> <li data-bbox="912 798 1474 888">• Those used for equipment flushing should have flash points equal to or higher than those of the coating material.</li> <li data-bbox="912 915 1474 974">• Those used for general cleaning must have flash points above 1000F (37.80C).</li> </ul> <p data-bbox="912 1045 1487 1167">Spray booth ventilation must be kept at the rates required by NFPA 33, 2009 Edition, OSHA and local codes. Ventilation must be maintained during cleaning operations using flammable or combustible solvents.</p> <p data-bbox="912 1239 1321 1266">Electrostatic arcing must be prevented.</p> <p data-bbox="912 1337 1474 1396">Non-factory replacement parts or unauthorized equipment modifications may cause fire or injury.</p> <p data-bbox="912 1467 1463 1558">If used, a key switch bypass is intended for use only during setup operations. Production should never be done with safety interlocks disabled.</p> <p data-bbox="912 1629 1455 1688">Never use equipment for use in waterborne installations to spray solvent based materials.</p> |

| AREA   | HAZARD   | SAFEGUARDS  |
|--|--|---|
| <p><b>Spray Area</b></p>    | <p><b>Explosion</b></p> <p>Improper or inadequate operation and maintenance procedures may cause an explosion.</p> <p>Protection against inadvertent arcing that is capable of causing fire or explosion is lost if any safety interlocks are disabled during operation. Frequent power supply shut-down indicates a problem in the system requiring correction.</p>           | <p><b>Follow These Guidelines</b></p> <p>Electrostatic arcing <b>MUST</b> be prevented.</p> <p>All electrical equipment must be located outside Class I or II, Division 1 or 2 hazardous areas, in accordance with NFPA 33, 2009 Edition.</p> <p>Test only in areas free of flammable or combustible materials.</p> <p>The current overload sensitivity (if equipped) <b>MUST</b> be set as described in corresponding section of the equipment manual. Protection against inadvertent arcing that is capable of causing fire or explosion is lost if the current overload sensitivity is not properly set. Frequent power shutdown indicates a problem with the system which requires correction.</p> <p>Always turn the control panel off prior to flushing, cleaning, or working on spray system equipment.</p> <p>Ensure that the control panel is interlocked with the ventilation system and conveyor in accordance with NFPA 33, 2009 Edition.</p> <p>Have fire extinguishing equipment readily available and tested periodically.</p> |
| <p><b>Spray Area</b></p>  | <p><b>Explosion - Incompatible Materials</b></p> <p>Halogenated hydrocarbon solvents for example: methylene chloride and 1,1,1,-Trichloroethane are not chemically compatible with the aluminum that might be used in many system components. The chemical reaction caused by these solvents reacting with aluminum can become violent and lead to an equipment explosion.</p> | <p><b>Follow These Guidelines</b></p> <p>Aluminum is widely used in other spray application equipment - such as material pumps, regulators, triggering valves, etc. Halogenated hydrocarbon solvents must never be used with aluminum equipment during spraying, flushing, or cleaning. Read the label or data sheet for the material you intend to spray. If in doubt as to whether or not a coating or cleaning material is compatible, contact your coating supplier. Any other type of solvent may be used with aluminum equipment.</p>   |

| AREA  | HAZARD   | SAFEGUARDS  |
|---|--|---|
| <p><b>Spray Area / High Voltage Equipment</b></p>  | <p><b>Electrical Discharge</b></p> <p>There is a high voltage device that can induce an electrical charge on ungrounded objects which is capable of igniting coating materials.</p> <p>Inadequate grounding will cause a spark hazard. A spark can ignite many coating materials and cause a fire or explosion.</p>  | <p><b>Follow These Guidelines</b></p> <p>Parts being sprayed must be supported on conveyors or hangers and be grounded. The resistance between the part and ground must not exceed 1 mega ohm.</p> <p>All electrically conductive objects in the spray area, with the exception of those objects required by the process to be at high voltage, must be grounded.</p> <p>Any person working in the spray area must be grounded.</p> <p>Unless specifically approved for use in hazardous locations, the power supply and other electrical control equipment must NOT be used in Class I, Division 1 or 2 locations.</p> |
| <p><b>Electrical Equipment</b></p>                | <p><b>Electrical Discharge</b></p> <p>High voltage equipment is utilized. Arcing in areas of flammable or combustible materials may occur. Personnel are exposed to high voltage during operation and maintenance.</p> <p>Protection against inadvertent arcing that may cause a fire or explosion is lost if safety circuits are disabled during operation.</p> <p>Frequent power supply shutdown indicates a problem in the system which requires correction.</p> <p>An electrical arc can ignite coating materials and cause a fire or explosion.</p> | <p><b>Follow These Guidelines</b></p> <p>All electrical equipment must be located outside Class I or II, Division 1 or 2 hazardous areas. Refer to NFPA 33, 2009 Edition.</p> <p>Turn the power supply OFF before working on the equipment.</p> <p>Test only in areas free of flammable or combustible material.</p> <p>Testing may require high voltage to be on, but only as instructed.</p> <p>Production should never be done with the safety circuits disabled.</p> <p>Before turning the high voltage on, make sure no objects are within the sparking distance.</p>  |



| AREA   | HAZARD   | SAFEGUARDS   |
|--|--|--|
| <p><b>Toxic Substances</b></p>  | <p><b>Mechanical Hazard</b></p> <p>Certain material may be harmful if inhaled, or if there is contact with the skin.</p>   | <p><b>Follow These Guidelines</b></p> <p>Follow the requirements of the Material Safety Data Sheet supplied by the coating manufacturer.</p> <p>Adequate exhaust must be provided to keep the air free of accumulations of toxic materials.</p> <p>Use a mask or respirator whenever there is a chance of inhaling sprayed materials. The mask must be compatible with the material being sprayed and its concentration. Equipment must be as prescribed by an industrial hygienist or safety expert, and be NIOSH approved.</p> |
| <p><b>Robot Work Area</b></p>  | <p><b>Mechanical Hazard</b></p> <p>Improper use or maintenance can lead to hazardous conditions, particularly from unexpected robot manipulator movement.</p>                      | <p><b>Follow These Guidelines</b></p> <p>Applicator adjustments or maintenance should be done after the robot is taken out of service. Do not adjust or repair the applicator if the robot is operating or standing ready to start.</p> <p>Refer to robot operating instructions for the procedures to take a robot out of service.</p> <p>Follow all OSHA Lockout / Tagout procedures when performing any maintenance.</p>  |
| <p><b>All Areas</b></p>  | <p><b>Improper / Inadequate Training</b></p> <p>Improper operation or maintenance may create a hazard.</p> <p>Personnel must be properly trained in the use of this equipment.</p> | <p><b>Follow These Guidelines</b></p> <p>Personnel must be given training in accordance with the requirements of NFPA 33, 2009 Edition.</p> <p>Instructions and safety precautions must understood prior to using this equipment.</p> <p>Comply with appropriate codes governing ventilation, fire protection, operation maintenance, and housekeeping. OSHA references are sections 1910.94 and 1910.107. Also refer to NFPA 33, 2009 Edition and your insurance company requirements.</p>                                      |

## Section 2: INTRODUCTION

The **Inline / Piggable Modular Color Changer** assembly was designed for use with a pipe circulating system that can also operate as a piggable fluid delivery systems. Made of stainless steel for corrosion resistance and built to stand up under hard, continuous use. The PCC can be easily mounted and was designed for adaptability to the user's needs.

### SPECIFICATIONS - Environmental / Physical

**Valve Size:** Single Valve (See "Mounting Color Changer" figures in the "Installation" section)

**Valve Block Assembly Weight:** Single Valve Assembly: .45 lbs. (205 grams)

**Assembly Weight with 3/4" Tube:** .95 lbs. (430 grams)

**Purge Block Assembly Weight:** .96 lbs. (435 grams)

**Spacer Block Weight:** .936 Block: .20 lbs. (91 grams)

.437 Block: .09 lbs. (41 grams)

**Spacer Plate Weight:** .936 Spacer Plate: .04 lbs. (18.1 grams)

.437 Spacer Plate: .02 lbs. (9.1 grams)

**Operating Pressure:** Fluid: 300 psi max. (20.68 bar)

Trigger Tube: 5/32" (4mm) OD

**Micro-Valve Air Actuating Pressure:** 75-120 psi (5.2-8.3 bar)



**Average Flow Rate:** 75 Fl. Oz./2200cc per min. @ 75 psi (50 centiposee)

**Maximum Number of Colors:** 20

**Construction Materials:** Stainless Steel, UHMW, Fluoropolymer elastomers, and Acetal

# PRE-ENGINEERED COLOR CHANGER ASSEMBLIES


The following is for "Pre-Engineered" Color Changer assemblies. Please reference selection chart for the changer assembly number.

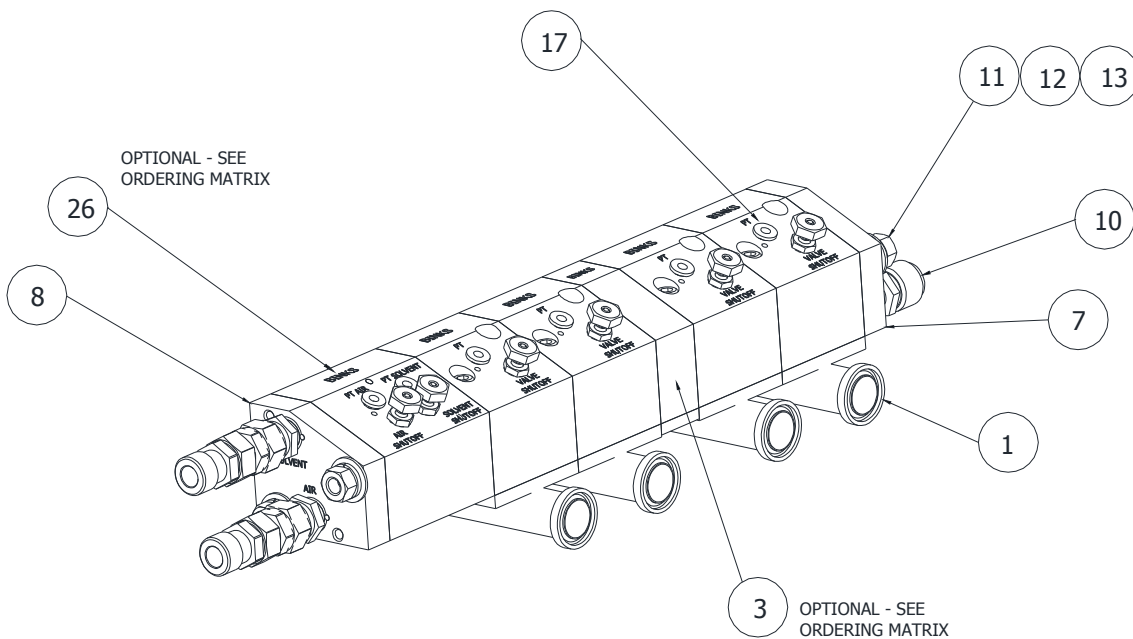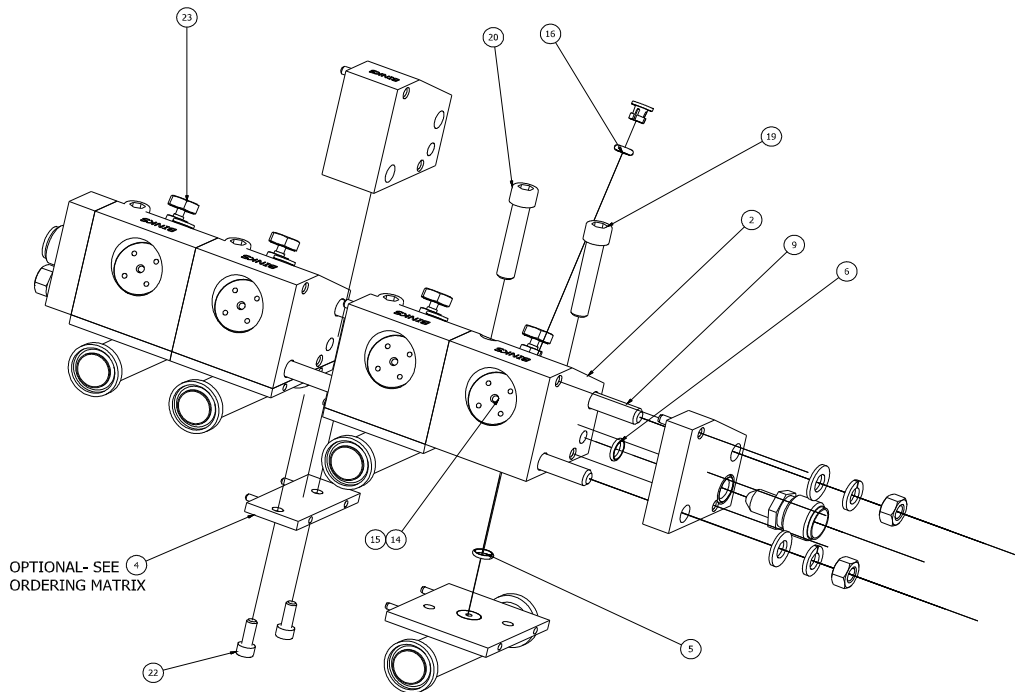

ASSEMBLY SHOWN WITH PURGE BLOCK ASSEMBLY INSTALLED

## COLOR CHANGER ASSEMBLY SELECTION GUIDE

When ordering, use A12800 - A, B, or C as indicated by Table A thru C. Four digits must follow the basic part number. For example:

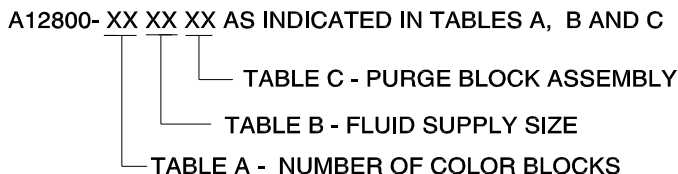

| <b>INLINE / PIGGABLE MODULAR COLOR CHANGER PARTS LIST</b> |                 |                 |                                      |
|---|-----------------|-----------------|--------------------------------------|
| ITEM  | QTY             | PART NUMBER     | DESCRIPTION                          |
| 1   | Table A, Item A | Table B, Item E | Plate and Pipe Assembly (Tabulated)  |
| 2   | Table A, Item A | A12739-00       | Color Block (Piggable)               |
| 3   | Table A, Item B | Table B, Item J | Spacer Block                         |
| 4   | Table A, Item B | Table B, Item K | Spacer Plate                         |
| 5   | Table A, Item A | 79001-05        | O-Ring, Solvent Proof *****          |
| 6   | Table A, Item H | 79001-06        | O-Ring, Solvent Proof *****          |
| 7   | 1               | A12759-00       | End Block, Outlet                    |
| 8   | Table C, Item M | A12757-00       | End Block, Inlet                     |
| 9   | Table B, Item G | A12744-XX       | Threaded Rod                         |
| 10  | 2               | 78079-00        | Fitting, 7/16-20 X 3/8 NPS*****      |
| 11  | 4               | 78405-06        | Flat Washer, Stainless, 5/16         |
| 12  | 4               | 77588-07        | Lock Washer                          |
| 13  | 4               | A12765-00       | Hex Nut, 5/16-18, SS *****           |
| 14  | Table A, Item A | 77367-00        | Valve Seat Assembly ****             |
| 15  | Table A, Item A | 78949-00        | Valve Assembly (Non-Repairable) ***  |
| 16  | Table A, Item A | 79001-30        | O-Ring, Solvent Proof *****          |
| 17  | Table A, Item A | 77516-04        | Collet, 4mm                          |
| 18  | Table B, Item F | A12772-01       | Screw, SHCS, #10-24                  |
| 19  | Table A, Item L | A12727-00       | Screw, SHCS, Shut-off Valve Assembly |
| 20  | Table A, Item I | A10766-00       | Tool, Valve Seat Removal (Not Shown) |
| 21  | Table A, Item I | A10756-00       | Tool, Valve Removal (Not Shown)      |
| 23  | Table A, Item D | 76566-56C       | Screw, SHCSm 1/4-20 X 1.75, SS       |
| 24  | Table A, Item D | 76566-64C       | Screw, SHCS, 1/4-20 X 2.00, SS       |
| 26  | Table C, Item N | A12827-00       | Purge Block Assembly *****           |
| 27  | 1               | CS-11-01        | Service Manual                       |

- \* When building option with one color, threaded rod length to be 5.03 long (2) pieces.
- \*\* Each assembly requires 2 pieces each of threaded rod cut lengths, deburr ends of rod.
- \*\*\* Torque to 15-20 lbs•in after valve is down (1.7-2.3 Nm).
- \*\*\*\* Torque to 15-20 lbs•in. (1.7-2.3 Nm).
- \*\*\*\*\* Apply A11545-00 Petrolatum jell onto all o-rings before installation.
- \*\*\*\*\* Torque to 30 lbs•ft. (40.67 Nm).
- \*\*\*\*\* When ordering this option, add 2.6" to length of "G" in Table B.  
(Example: 1.91 + (2.12 X number of colors) + 2.6)
- \*\*\*\*\* Torque 30-50 lbs•in (.212/3.53 Nm)

## COLOR CHANGER ASSEMBLY SELECTION GUIDE (Continued)


| TABLE A - NUMBER OF COLOR BLOCKS |                        |         |         |         |         |         |
|----------------------------------|------------------------|---------|---------|---------|---------|---------|
| DASH NO.                         | DESCRIPTION            | "A" QTY | "B" QTY | "D" QTY | "H" QTY | "L" QTY |
| 01                               | Number of Color Blocks | 1       | 0       | 2       | 2       | 1       |
| 02                               | Number of Color Blocks | 2       | 1       | 4       | 3       | 2       |
| 03                               | Number of Color Blocks | 3       | 2       | 6       | 4       | 3       |
| 04                               | Number of Color Blocks | 4       | 3       | 8       | 5       | 4       |
| 05                               | Number of Color Blocks | 5       | 4       | 10      | 6       | 5       |
| 06                               | Number of Color Blocks | 6       | 5       | 12      | 7       | 6       |
| 07                               | Number of Color Blocks | 7       | 6       | 14      | 8       | 7       |
| 08                               | Number of Color Blocks | 8       | 7       | 16      | 9       | 8       |
| 09                               | Number of Color Blocks | 9       | 8       | 18      | 10      | 9       |
| 10                               | Number of Color Blocks | 10      | 9       | 20      | 11      | 10      |
| 11                               | Number of Color Blocks | 11      | 10      | 22      | 12      | 11      |
| 12                               | Number of Color Blocks | 12      | 11      | 24      | 13      | 12      |
| 13                               | Number of Color Blocks | 13      | 12      | 26      | 14      | 13      |
| 14                               | Number of Color Blocks | 14      | 13      | 28      | 15      | 14      |
| 15                               | Number of Color Blocks | 15      | 14      | 30      | 16      | 15      |
| 16                               | Number of Color Blocks | 16      | 15      | 32      | 17      | 16      |
| 17                               | Number of Color Blocks | 17      | 16      | 34      | 18      | 17      |
| 18                               | Number of Color Blocks | 18      | 17      | 36      | 19      | 18      |
| 19                               | Number of Color Blocks | 19      | 18      | 38      | 20      | 19      |
| 20                               | Number of Color Blocks | 20      | 19      | 40      | 21      | 20      |

| TABLE B - FLUID SUPPLY SIZE |                 |           |         |           |           |  |
|-----------------------------|-----------------|-----------|---------|-----------|-----------|--|
| DASH NO.                    | DESCRIPTION     | "E"       | "F" QTY | "J"       | "K"       | "G" LENGTH OF THREADED ROD   |
| 01                          | 1/2" Standard   | A12740-01 | 0       | --        | --        | 1.91 + (2.12 X Number of Colors) Pipe Assemblies will be on 2 1/16" Centers **** |
| 02                          | 3/4" Standard   | A12740-02 | 0       | --        | --        | 1.91 + (2.12 X Number of Colors) Pipe Assemblies will be on 2 1/16" Centers      |
| 03                          | 1" Standard     | A12740-03 | 2       | A12742-00 | A12762-00 | 1.91 + (3.06 X Number of Colors) Pipe Assemblies will be on 3" Centers ***       |
| 04                          | 1 1/2" Standard | A12740-04 | 2       | A12742-00 | A12762-00 | 1.91 + (3.06 X Number of Colors) Pipe Assemblies will be on 3" Centers ***       |
| 05                          | 1/2" Standard   | A12740-01 | 2       | A12861-00 | A12860-00 | 1.91 + (2.48 X Number of Colors) Pipe Assemblies will be on 2 1/2" Centers       |
| 06                          | 3/4" Standard   | A12740-02 | 2       | A12861-00 | A12860-00 | 1.91 + (2.48 X Number of Colors) Pipe Assemblies will be on 2 1/2" Centers       |

| TABLE C  |                            |     |     |
|----------|----------------------------|-----|-----|
| DASH NO. | DESCRIPTION                | "M" | "N" |
| 00       | None                       | 1   | 0   |
| 01       | Purge Block Assembly ***** | 0   | 1   |

INSTALL 78077-00 CHECK VALVES ON INCOMING AIR AND SOLVENT LINES TO PURGE BLOCK ASSEMBLY.

## COLOR CHANGER ASSEMBLY SELECTION GUIDE (Continued)

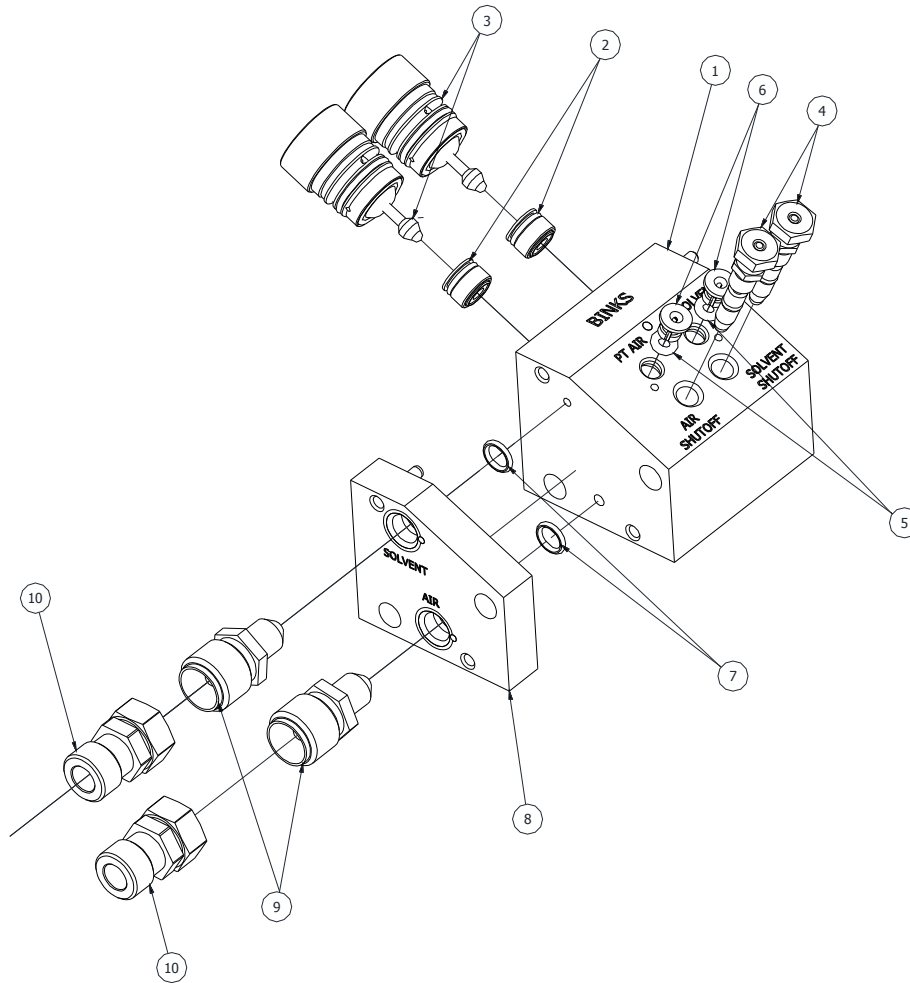

**A12827-00 PURGE BLOCK ASSEMBLY**

|   | ITEM | QTY | PART NUMBER | DESCRIPTION                            |
|---|------|-----|-------------|--|
|   | 1    | 1   | A12754-00   | PURGE BLOCK                            |
| 2 | 2    | 2   | 77367-00    | VALVE SEAT ASSEMBLY                    |
| 1 | 3    | 2   | 78949-00    | VALVE ASSEMBLY                         |
|   | 4    | 2   | A12727-00   | SHUTOFF VALVE ASSEMBLY                 |
|   | 5    | 2   | 79001-30    | O-RING, SOLVENT PROOF                  |
|   | 6    | 2   | 77516-04    | COLLET, 4 MM                           |
|   | 7    | 2   | 79001-06    | O-RING, SOLVENT PROOF                  |
| 3 | 8    | 1   | A12829-00   | PURGE BLOCK END PLATE ASEMBLY          |
|   | 9    | 2   | 78079-00    | FTG, 7/16-20 X 3/8 NPS                 |
|   | 10   | 2   | 78077-00    | CHECK VALVE, 3/8 NPS (F) x 3/8 NPS (M) |

2 TORQUE TO 15-20 LBS/IN

1 TORQUE TO 15-20 LBS/IN AFTER VALVE IS DOWN

4. APPLY A11545-00 PETROLATUM JELL TO ALL O-RINGS PRIOR TO INSTALLATION

3 TORQUE TO 30 LBS/FT

## Section 3: INSTALLATION

This information is intended ONLY to indicate the general installation parameters of this product and, where applicable, its working relationship to other Binks system components in typical use.

Each installation is unique and should be directed by an authorized Binks representative or conducted using the Binks installation drawings provided for your particular installation.

### COLOR CHANGER INSTALLATION PROCEDURES

#### Determine Location for Color Changer

The color changer should be located as close as possible to the spray device in order to save paint and solvent. If possible, use an enclosure to protect the color changer from airborne paints and solvents.

#### Calculate Footprint of Color Changer (See Mounting Single Valve Color Changer Figure)

To calculate the footprint of the color changer add:

1. The dimension of the purge assembly (if used).
2. The dimension(s) of the color block(s) used to create the desired number of color valves.
3. The dimension of the inlet/outlet block.

Dimension of Purge Assembly: 2.60" (66.04mm)

Dimension of Color Block Assembly: 2.064" (52.43mm)

Dimension of Spacer Block: .936"(23.77mm) and .437 (11.10mm)

Dimension of Inlet or Outlet Block: .53"(13.46mm)

Example of 1/2" and 3/4" Pipe Assembly with 2 Color Blocks (No Spacers):



|                |        |   |
|----------------|--------|---|
| Inlet Block    | .53"   | $.53" + .53" + 2.064" + 2.064" = 5.188"$ (131.7mm)                      |
| Outlet Block   | .53"   | <b>NOTE: If adding Purge Block Assembly add 2.600"</b>                  |
| #1 Color Block | 2.064" | $5.188" + 2.600" = 7.988"$ (197.82mm)                                   |
| #2 Color Block | 2.064" | <b>(NOTE: These pipe center lines will be 2 1/16" Center to Center)</b> |

Example of 1" and 1 1/2" Pipe Assembly with 2 Color Blocks with .437 Spacer Block:


|                      |        |  |
|----------------------|--------|--|
| Inlet Block          | .53"   | $.53" + .53" + .437" + 2.064" + 2.064" = 5.625"$ (142.88mm)            |
| Outlet Block         | .53"   | <b>(NOTE: If adding Purge Block Assembly add 2.600")</b>               |
| #1 Color Block       | 2.064" | $5.625" + 2.600" = 7.225"$ (183.52mm)                                  |
| #2 Color Block       | 2.064" | <b>(NOTE: These pipe center lines will be 2 1/2" center to center)</b> |
| Spacer Block         | .437"  |  |
| Purge Block Assembly | 2.600" |  |

**NOTE: WHEN PURGE BLOCK ASSEMBLIES ARE INSTALLED, CHECK VALVES MUST BE INSTALLED ON SOLVENT AND AIR INLET FITTINGS.**


# COLOR CHANGER INSTALLATION PROCEDURES (Continued)

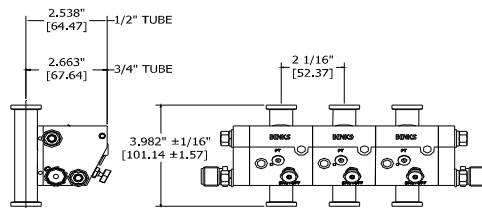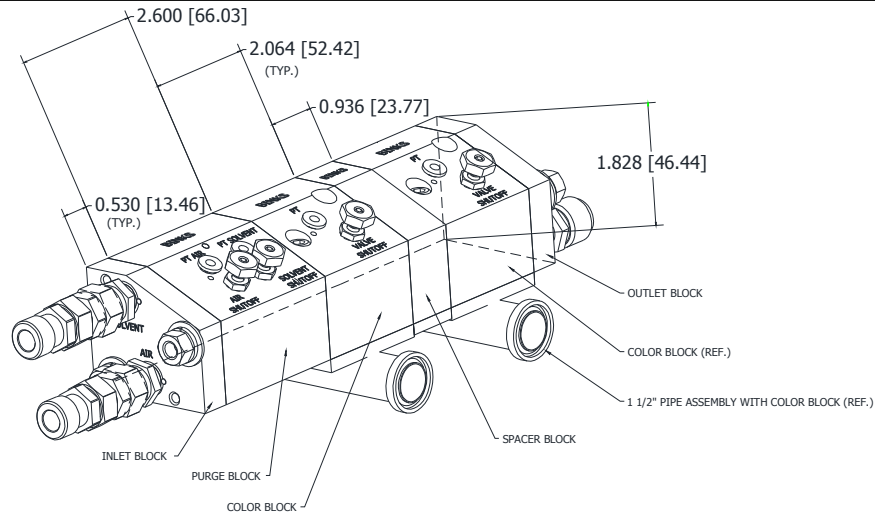

1/2 & 3/4 PIPE ASSEMBLIES/ NO SPACERS

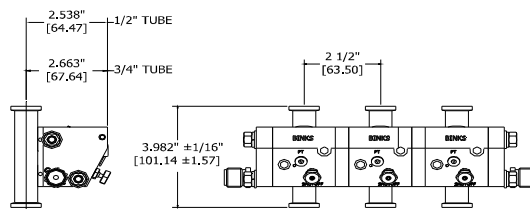

1/2 & 3/4 PIPE ASSEMBLIES WITH A12861-00 (7/16") SPACER

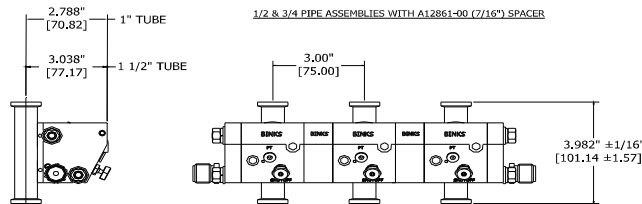

1" & 1 1/2" PIPE ASSEMBLIES WITH A12742-00 (15/16") SPACER

## Mounting The Color Changer

The mounting configuration is as follows: Single Valve (See Figures Above)

**NOTE - In and out plates are tapped 7/16-20 for "AN" taper fitting.**

**NOTE - The .936 wide spacer plates (A12742-00) are to be used with 1" or larger pipe assemblies to insure clearance distance of sanitary clamps.**

**NOTE - The .437 wide spacer blocks (A12861-00) are to be used if retrofitting older Binks Modular Color Change Systems requiring 2 1/2" (63.5mm) center to center spacing of pipe assemblies.**




# Section 3: OPERATION

This information is intended ONLY to indicate the general installation parameters of this product and, where applicable, its working relationship to other Binks system components in typical use.


Each installation is unique and should be directed by an authorized Binks representative or conducted using the Binks installation drawings provided for your particular installation.

The assembly consists of modules attached to each other. Modules may be added or removed from the assembly as desired. If, for instance, the number of required materials increases, the assembly can be expanded by adding additional modules. Each module can also be individually serviced. The Modular Color Changer is recommended for use with waterborne or solventborne paints.

TYPICAL COLOR CHANGER

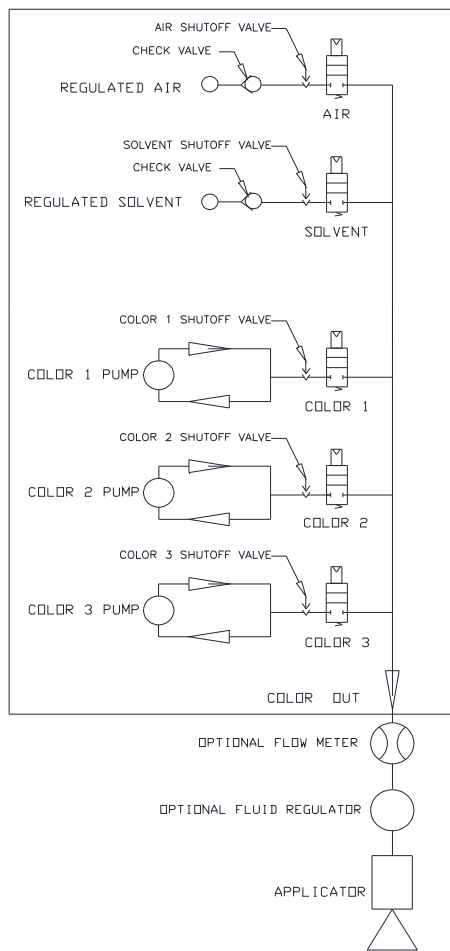

REMOTE PURGE MODULE FROM EXISTING COLOR STACK OR EXISTING PURGE MODULE

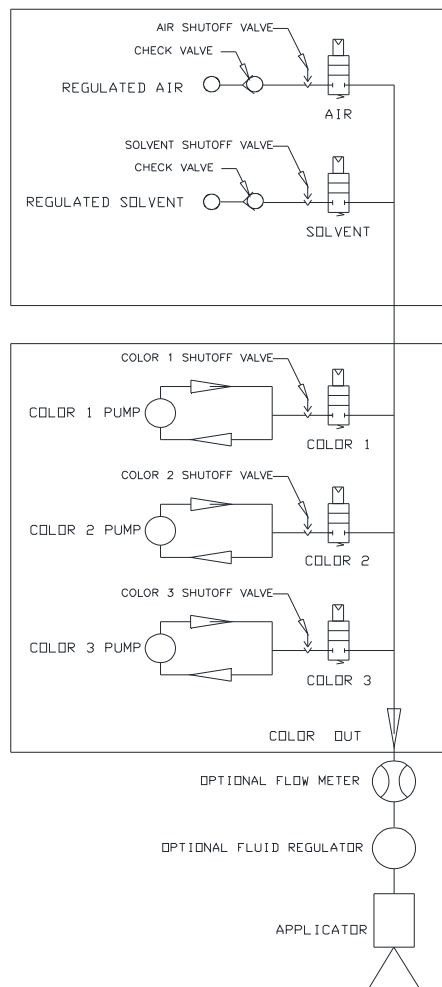

COLOR CHANGER SCHEMATICS

## GROUNDING OF THE COLOR CHANGER




### WARNING

- The color changer **MUST** be properly grounded. Proper grounding (as described below) will prevent static charge build-up and possible discharge from the color changer.

### GROUNDING OF THE COLOR CHANGERS

For safety, the color changer **MUST** be grounded. Using a 12-gauge wire, ground the output plate of the color changer to a true earth ground. Using an ohm meter, check for ground, testing the earth ground to the purge assembly top plate. The resistance should be 10 ohms or less.

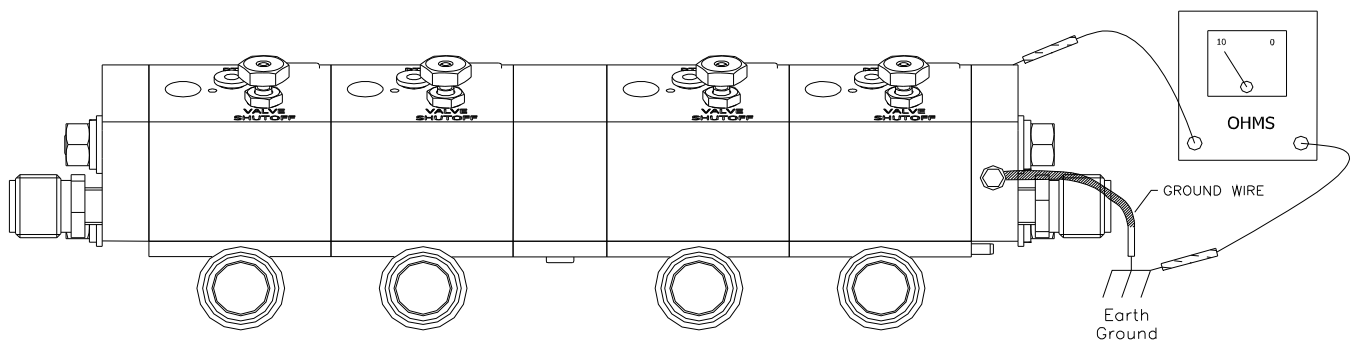

### FLUID INLET AND OUTLET FITTINGS

The in and out of the pipe assemblies have standard sanitary fittings.

**NOTE - In and out hoses CAN be reversed on the color changer.**


### AIR PILOT HOSE

Each color changer valve requires a 5/32"(4mm) pilot hose to activate the color valve.


### FLUID OUTPUT HOSE

The fluid output hose of the color changer has a 3/8"NPS (M) fitting. For safety and solvent savings, it is recommended that a PFA fluoroethylene hose be used between the color changer and the spray device.

# COLOR CHANGER ASSEMBLY

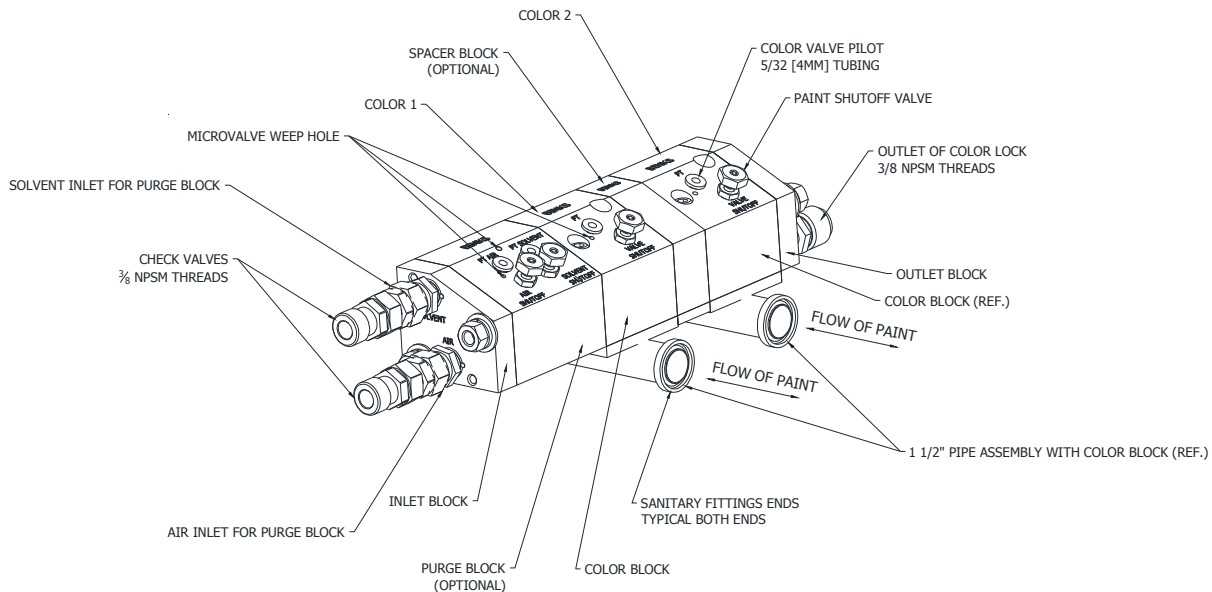

**Assembly with Purge Block**

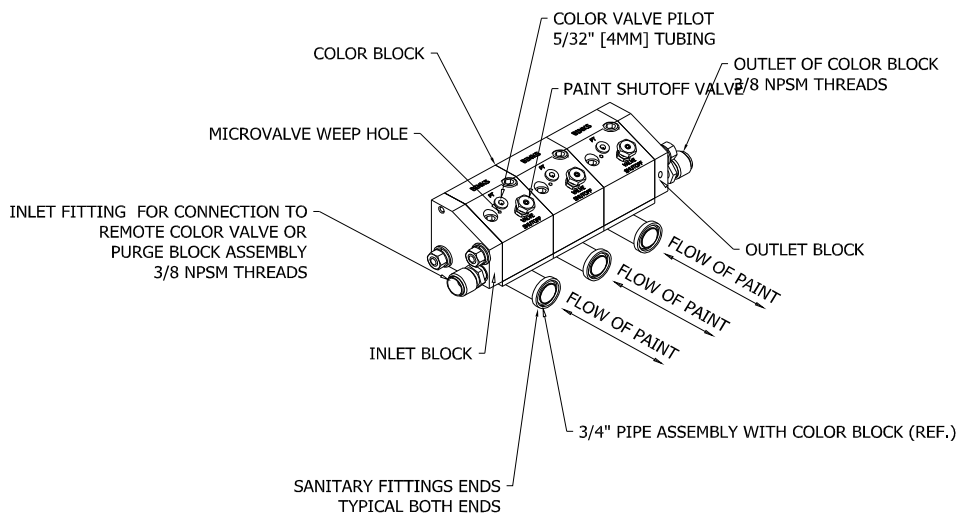

**Assembly with No Purge Block**

**NOTE - Microvalve Weep Holes**

These holes will give an indication of fluid valve failure. In the event of the fluid seal failure, paint or solvent will be seen coming out of this hole. In the event that the air seal for the piston fails, air will be heard or felt coming from this hole.

## Section 4: MAINTENANCE




### CAUTION

- Before attempting to remove **BOTH** the Microvalve Assembly (78949-00) and the Valve Seat Assembly (77367-00), first turn the Shut-Off Valve (A11591-11) counter-clockwise to its open position. Then relieve and flush the main inlet circulating paint line.


**NOTE**—If **ONLY** the Microvalve Assembly (78949-00) is to be removed or replaced, turn the Shut-Off Valve (A11591-00) clockwise to its closed position. Then relieve and flush the microvalve or downstream side of the color changer.

1. **Microvalve Assembly (78949-00)** - Using the valve removal tool (A10756-00 or A11922-00), engage the four (4) pins of the tool into the four (4) pin holes of the valve assembly. Turn the assembly counter-clockwise until removed).

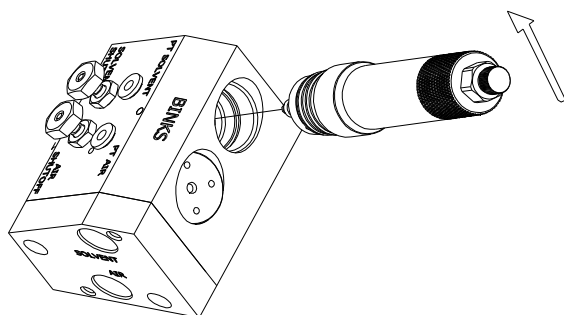


VALVE REMOVAL

2. **Valve Seat Assembly (77367-00)** - If required to remove the valve seat assembly, use the valve seat removal tool (A10766-00) turning the valve seat counter-clockwise until removed. Clean and inspect the valve body and o-rings for defects, replace if necessary.

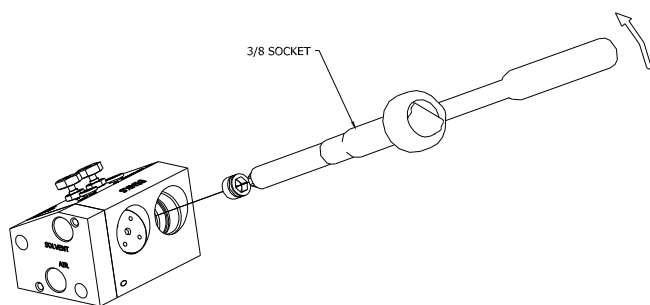


VALVE SEAT REMOVAL

3. **Seat and Microvalve Installation**—If valve seat was removed, lightly lubricate the o-ring on the seat assembly with petroleum jelly. Install valve seat and tighten to 15-20 lbs•in (1.7-2.3 Nm) of torque. Lightly lubricate the o-rings on the microvalve assembly. Install the valve and tighten to 15-20 lbs•in (1.7-2.3 Nm) of torque after valve is down.

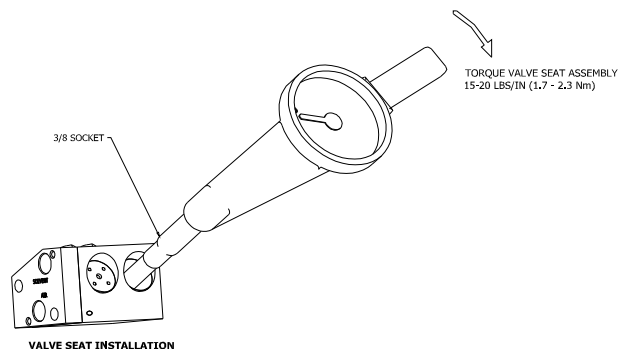


VALVE SEAT INSTALLATION

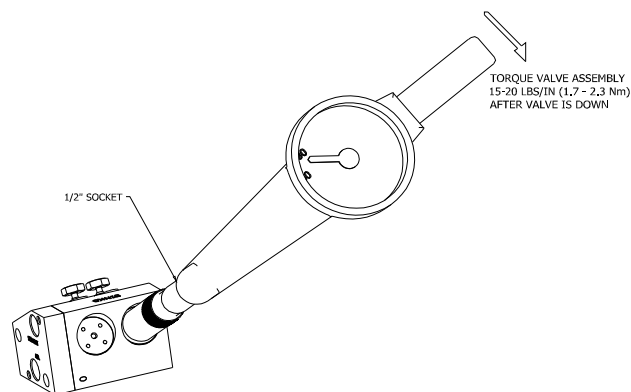

VALVE INSTALLATION

# TEST AND CHECK OUT PROCEDURE FOR COLOR CHANGER

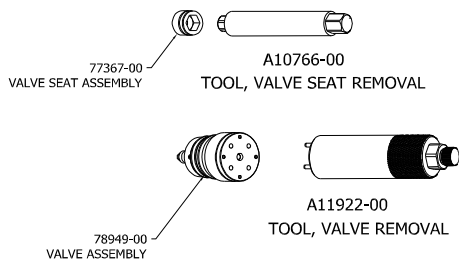

## TEST AND CHECK OUT PROCEDURE FOR COLOR CHANGER

### Step 1: Test Setup

- Connect a main air line to the regulator #4.
- Attach the output of #4 to a push button, manually operated pneumatic On/Off valve #5 and #3, two-way manual ball valve. Attach a 5/32" hose from the output of #5 to pilot connection for the color valve.
- Attach the output of #3 the sanitary fitting input of the valve. Plug the opposite sanitary fitting of valve.
- Attach pipe tee, gage, #2 and two-way ball valve assembly #1 to the output of the color changer. Plug off other side.

### Step 2: Testing Color Valve Assembly

- Set output pressure of regulator #4 to 90-100 psi.

**NOTE—Turn the shutoff valve #6 counter-clockwise to the OPEN position.**

- With ball valves #1 and #3 in the Off position, push and release the button on the pneumatic valve #5, triggering the microvalve assembly (78949-00) On and Off.
- Visually inspect the movement of the valve and check for air leaks from the weep hole on the color valve body. If air is leaking, repair or replace valve assembly (78949-00). Check for leaks between the pipe/plate assembly and color valve block. Tighten screws or replace o-ring if necessary.
- With ball valves #1 and #3 in the On (open) position, push and release the button on the pneumatic valve #5 triggering the microvalve assembly (78949-00) On and Off. Check for a crisp and sharp actuation of air flow through the output of the #1 ball valve. If valve is sluggish, repair or replace valve assembly (78949-00).

### Step 3: Testing Valve Body Leak Test

- With ball valve #3 in the On (open) position and valve #1 in the Off position, push and release the button on the pneumatic valve #5 triggering the microvalve assembly (78949-00) On and Off several times.
- Check the pressure gage reading on the #2 assembly. This should be within 5 psi of the pressure of the set pressure on regulator #4. The pressure should remain until the valve #1 is returned to the open position. If the pressure does not remain, check all fittings, hardware, and o-rings on the valve body and plate assembly.

### Step 4: Testing Microvalve and Valve Seat Assemblies

- With ball valve #1 in the On position, and valve #3 in the On position, push and release the button on the pneumatic valve #5 triggering the microvalve assembly (78949-00) On and Off several times.
- Close the 2-way ball valve on the #1 assembly. The pressure should remain 0 psi.


If the pressure is greater than 0 psi, the valve seat assembly (77367-00) should be replaced.



### WARNING

- NEVER** wrap the equipment in plastic to keep it clean. A surface charge may build-up on the plastic surface and discharge to the nearest grounded object. Efficiency of the equipment will also be reduced and damage or failure of the equipment's components may occur. **WRAPPING THE EQUIPMENT** in plastic will void warranty.

# VALVE TESTING ASSEMBLY

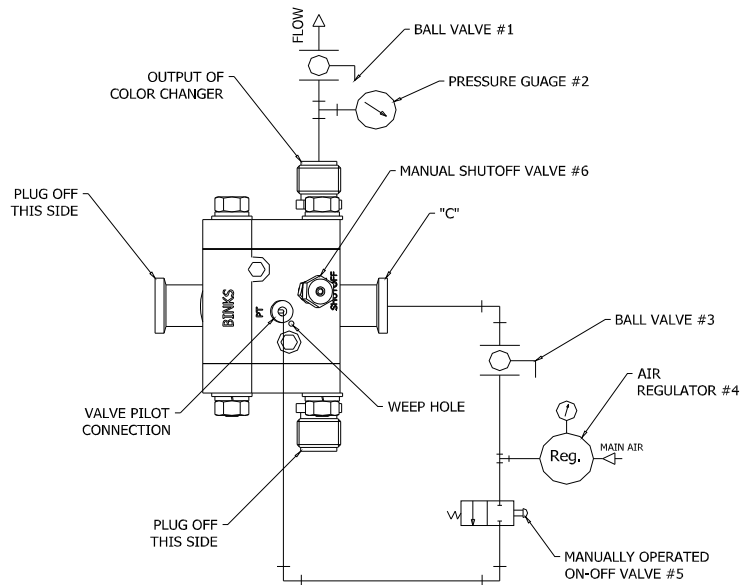




**Valve Testing Assembly**

## Microvalve Weep Holes

These holes will give an indication of fluid valve failure. In the event of the fluid seal failure, paint or solvent will be seen coming out of this hole. In the event that the air seal for the piston fails, air will be heard or felt coming from this hole.


# OPTIONAL EQUIPMENT

## TOOLS AND OPTIONAL EQUIPMENT

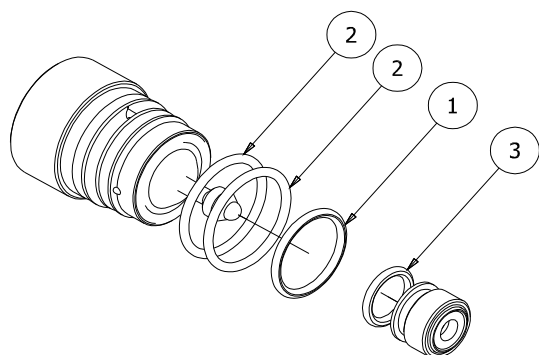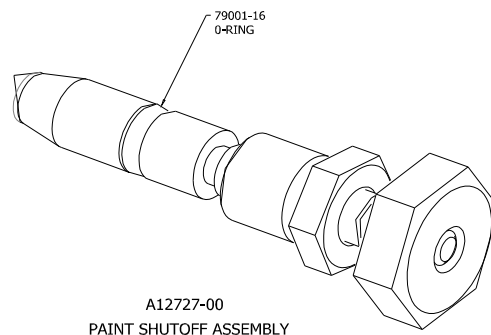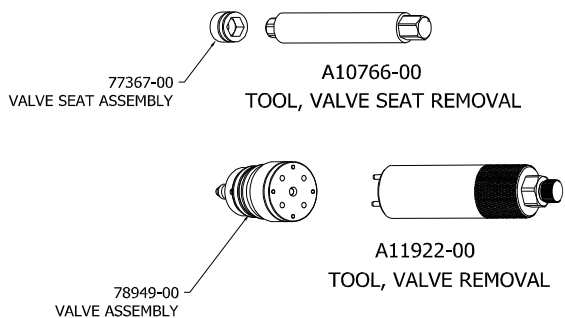

### 78949-00 VALVE ASSEMBLY / 77367-00 SEAT ASSEMBLY REPLACEMENT PARTS

| ITEM | PART NUMBER | DESCRIPTION           |
|------|-------------|-----------------------|
| 1    | 79001-01    | O-Ring (Solventproof) |
| 2    | 79001-02    | O-Ring (Solventproof) |
| 3    | 79001-04    | O-Ring (Solventproof) |

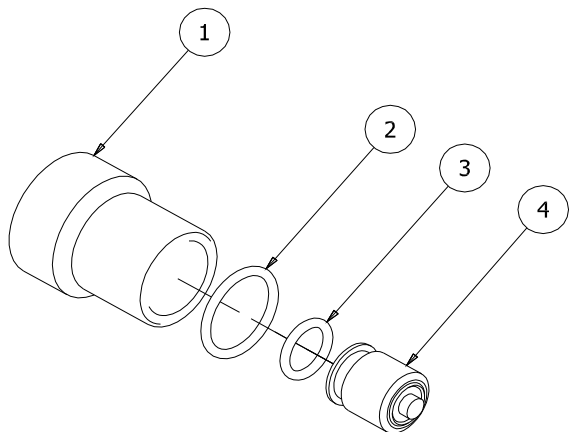

### 77620-00 VALVE PLUG KIT

| ITEM | PART NUMBER | DESCRIPTION           |
|------|-------------|-----------------------|
| 1    | 79244-00    | Plug                  |
| 2    | 79001-19    | O-Ring (Solventproof) |
| 3    | 79001-14    | O-Ring (Solventproof) |
| 4    | 77618-00    | Plug Seat             |

## RECOMMENDED SPARE PARTS

| RECOMMENDED SPARE PARTS |   |     |
|-------------------------|---|-----|
| PART NUMBER             | DESCRIPTION                             | QTY |
| A12727-00               | Shut-off Valve Assembly                 | 4   |
| 78949-00                | Valve Assembly                          | 2   |
| 77367-00                | Valve Seat Assembly                     | 2   |
| 77516-04                | Collet, 4mm                             | 2-4 |
| 78077-00                | Check Valve 3/8 NPSF to 3/8 NPSM Swivel | 1-2 |

---

### Changes Made

#### Changes made to CS-11-01.3 Service Manual:

- Page 11 Revised bottom drawing to show check valves 78077-00.
- Page 14 Revised drawing to show check valves 78077-00 item 10
- Page 15 Added Note.
- Page 16 Revised upper drawing to show check valves 78077-00.
- Page 17 Revised schematics to show check valves.
- Page 19 Revised upper drawing to show check valves 78077-00.



## WARRANTY POLICIES

### **LIMITED WARRANTY**

Binks will replace or repair without charge any part or equipment that fails within the specified time (see below) because of faulty workmanship or material, provided that the equipment has been used and maintained in accordance with Binks' written safety and operating instructions, and has been used under normal operating conditions. Normal wear items are excluded.

### **THE USE OF OTHER THAN BINKS APPROVED PARTS VOIDS ALL WARRANTIES.**

**SPARE PARTS:** One hundred and eighty (180) days from date of purchase, except for rebuilt parts (any part number ending in "R") for which the warranty period is ninety (90) days.

**EQUIPMENT:** When purchased as a complete unit, is one (1) year from date of purchase.

### **WRAPPING THE APPLICATOR IN PLASTIC WILL VOID THIS WARRANTY.**

**BINKS' ONLY OBLIGATION UNDER THIS WARRANTY IS TO REPLACE PARTS THAT HAVE FAILED BECAUSE OF FAULTY WORKMANSHIP OR MATERIALS. THERE ARE NO IMPLIED WARRANTIES NOR WARRANTIES OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BINKS ASSUMES NO LIABILITY FOR INJURY, DAMAGE TO PROPERTY OR FOR CONSEQUENTIAL DAMAGES FOR LOSS OF GOODWILL OR PRODUCTION OR INCOME, WHICH RESULT FROM USE OR MISUSE OF THE EQUIPMENT BY PURCHASER OR OTHERS.**

### **EXCLUSIONS:**

If, in Bink's opinion the warranty item in question, or other items damaged by this part was improperly installed, operated or maintained, Binks will assume NO responsibility for repair or replacement of the item or items. The purchaser, therefore will assume all responsibility for any cost of repair or replacement and service related costs if applicable.

**Product Manual Price: \$50.00 (U.S.)**

**Manufacturing**

1910 North Wayne Street  
Angola, Indiana 46703-9100  
Telephone: 260-665-8800  
Fax: 260-665-8516

**Technical Service - Assistance**

320 Phillips Ave.  
Toledo, Ohio 43612-1493  
Telephone (toll free): 800-233-3366  
Telephone: 419-470-2021  
Fax: 419-470-2233

**Technical Support Representatives can direct you to the appropriate telephone number for ordering spare parts.**

© 2013 Binks All rights reserved.

Models and specifications subject to change without notice.

Form No. CS-11-01.2

Litho in U.S.A.

02/13