

# MX432

## 32:1 PUMP SYSTEMS

### FOR AIR ASSIST & AIRLESS FINISHING

PATENT 7,603,355



<b>SPECIFICATIONS</b>	
Ratio:	32:1
Maximum air inlet pressure:	8 bar [116 psi]
Maximum fluid pressure:	256 bar [3712 psi]
Displacement per cycle:	24 cc [0.8 oz]
Output @ 60 cycles/min:	1.4 L/m [0.4 gal/m]
Air consumption @ 20 cycles/min. @ 8 bar [116 psi] air inlet pressure:	147 LPM [5.2 SCFM] @20 LPM
Maximum recommended continuous cycle rate:	20 cycles/min
Air inlet connection:	3/8" BSP(m) and 1/4" NPS(m)
Air piston diameter:	85 mm [3.3 in]
Stroke length:	75 mm [3.0 in]
Fluid inlet connection:	3/4" NPS(m)
Fluid outlet connection:	3/8" BSP(m) / 3/8" NPS(m)
Wetted parts materials of construction:	Stainless Steel, Tungsten Carbide, Hard Chrome, PTFE, Polyethylene, Leather
Sound level:	96.2 dB

In this part sheet, the words **WARNING**, **CAUTION** and **NOTE** are used to emphasize important safety information as follows:

**⚠ WARNING**  
 Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

**⚠ CAUTION**  
 Hazards or unsafe practices which could result in minor personal injury, product or property damage.

**NOTE**  
 Important installation, operation or maintenance information.

**⚠ WARNING**

Read the following warnings before using this equipment.



**READ THE MANUAL**  
 Before operating finishing equipment, read and understand all safety, operation and maintenance information provided in the operation manual.



**WEAR SAFETY GLASSES**  
 Failure to wear safety glasses with side shields could result in serious eye injury or blindness.



**DE-ENERGIZE, DEPRESSURIZE, DISCONNECT AND LOCK OUT ALL POWER SOURCES DURING MAINTENANCE**  
 Failure to De-energize, disconnect and lock out all power supplies before performing equipment maintenance could cause serious injury or death.




**OPERATOR TRAINING**  
 All personnel must be trained before operating finishing equipment.



**EQUIPMENT MISUSE HAZARD**  
 Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in serious injury.



**KEEP EQUIPMENT GUARDS IN PLACE**  
 Do not operate the equipment if the safety devices have been removed.

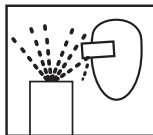

**PROJECTILE HAZARD**  
 You may be injured by venting liquids or gases that are released under pressure, or flying debris.



**PINCH POINT HAZARD**  
 Moving parts can crush and cut. Pinch points are basically any areas where there are moving parts.



**PACEMAKER WARNING**  
 You are in the presence of magnetic fields which may interfere with the operation of certain pacemakers.



**AUTOMATIC EQUIPMENT**  
 Automatic equipment may start suddenly without warning.



**INSPECT THE EQUIPMENT DAILY**  
 Inspect the equipment for worn or broken parts on a daily basis. Do not operate the equipment if you are uncertain about its condition.



**NEVER MODIFY THE EQUIPMENT**  
 Do not modify the equipment unless the manufacturer provides written approval.



**KNOW WHERE AND HOW TO SHUT OFF THE EQUIPMENT IN CASE OF AN EMERGENCY**



**PRESSURE RELIEF PROCEDURE**  
 Always follow the pressure relief procedure in the equipment instruction manual.



**NOISE LEVELS**  
 The A-Weighted sound level of pumping equipment and spray guns may exceed 85 dB (A) depending on the set-up being used. Details of actual noise levels are available on request. It is recommended that ear protection is worn at all times when spraying while pump is operating.



**HIGH PRESSURE CONSIDERATION**  
 High pressure can cause serious injury. Relieve all pressure before servicing. Spray from the spray gun, hose leaks, or ruptured components can inject fluid into your body and cause extremely serious injury.



**STATIC CHARGE**  
 Fluid may develop a static charge that must be dissipated through proper grounding of the equipment, objects to be sprayed and all other electrically conductive objects in the dispensing area. Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.



**PROP 65 WARNING**  
 WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PROVIDE THIS INFORMATION TO THE OPERATOR OF THE EQUIPMENT.**

**FOR FURTHER SAFETY INFORMATION REGARDING BINKS AND DEVILBISS EQUIPMENT, SEE THE GENERAL EQUIPMENT SAFETY BOOKLET (77-5300).**

## ⚠ WARNING



**HIGH PRESSURE CAN CAUSE SERIOUS INJURY IF EQUIPMENT IS INSTALLED OR USED INCORRECTLY—READ, UNDERSTAND, AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL.**

### **INSTALL, OPERATE OR SERVICE THIS EQUIPMENT ONLY AFTER ALL INSTRUCTIONS ARE CLEARLY UNDERSTOOD.**

It is the responsibility of the employer to place this information into the hands of the operator.

#### ⚠ WARNING

Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

#### ⚠ CAUTION


Hazards or unsafe practices which could result in minor personal injury, product or property damage.

#### NOTE

Important installation, operation or maintenance information.

#### AVOID STATIC SPARKING

1. Use Binks **NO-WIRE** conductive hose in all airless spraying operations. Be sure the gun and hose have continuity.
2. Make sure the pump is grounded. **NEVER** operate the unit when it is on a non-grounded platform.
3. When flushing or cleaning with a combustible solvent, always use an open metallic container for receiving the waste solvent. Ground the solvent receptacle.
4. **ALWAYS** remove spray tip when flushing the system. Operate the pump at the lowest possible pressure.

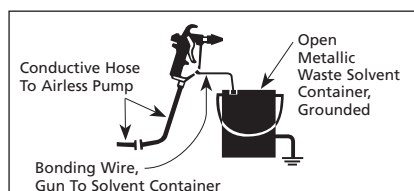

#### GENERAL WARNINGS

1. **NEVER** leave a pressurized sprayer unattended.
2. Periodically inspect all hoses for leaks and/or abrasions and tighten all connections before use. **DO NOT ATTEMPT TO REPAIR** a defective hose. **REPLACE** it with another conductive hose.
3. **ALWAYS** relieve pressure in the system by turning bypass valve to **BYPASS** or triggering spray gun before disassembly of any component parts.

#### CAUTION

Never store de-ionized, distilled, reverse osmosis or any pure grade of water in the pump. These fluids may cause corrosion.

#### NOTE

BINKS is not responsible for misapplication of pumps. Consult your BINKS representative for application assistance.

#### NOTE

Be sure that all fluids, solvents and fillers to be used are chemically and physically compatible with wetted parts in the pump. Consult your BINKS representative for pump materials of construction and compatibility information. Consult the fluid manufacture for information regarding the fluids to be used.


#### REPLACEMENT PARTS

The pump is designed to use authorized parts only. When using this pump with parts that do not comply with the minimum specifications and safety devices of Binks, the user assumes all risks and liabilities.

#### ⚠ WARNING

##### EXCESSIVE AIR PRESSURE

Can cause personal injury, pump damage or property damage. Do not exceed maximum inlet air pressure as stated on motor model plate.

HAZARD	CAUSE	SAFEGUARDS
<p><b>EXPLOSION</b></p> 	<p><b>STATIC ELECTRICITY</b></p> <p>Use of this equipment in a potentially explosive atmosphere.</p> <p>Vapors from flammable liquids can catch fire or explode from static electricity discharges.</p>	<ol style="list-style-type: none"> <li>1. If installing this equipment in a potentially explosive atmosphere, check the ATEX equipment category and temperature ratings meet the requirements for the zoned area.</li> <li>2. Check electrical continuity of the air supply to earth — should be no greater than <math>10^6 \Omega</math>.</li> <li>3. Electrically bond all metallic equipment to earth. Should be no greater than <math>1 \Omega</math>.</li> </ol>
<p><b>SPECIAL CONDITIONS FOR SAFE USE REQUIRED BY ATEX CERTIFICATION</b></p>	<p>Over pressurization of equipment can cause equipment failure or injury.</p> <p>Use lubricating medium resistant to carburisation.</p> <p>Improper operation or maintenance may create a hazard.</p>	<ol style="list-style-type: none"> <li>1. Do not exceed the stated maximum working pressures and motor speed as specified in this manual.</li> <li>2. Only a suitably approved static dissipating or conductive air supply hoses shall be attached to the equipment and terminated to the air supply.</li> <li>3. Air supplies (compressors, etc.) shall be sited in a non-hazardous area with a filter on the air intake system to prevent the ingress of dust or similar foreign material into the parts where compression takes place.</li> <li>4. Use lubricating medium resistant to carburisation and has an auto ignition temperature of more than <math>185^\circ\text{C}</math> for T4 equipment.</li> <li>5. User shall ensure all metallic parts of the equipment are suitably bonded to earth. Should be no greater than <math>1 \Omega</math>.</li> </ol>

## STARTUP AND OPERATION

(Part numbers referenced are contained in the MX432 bare pump assemblies part sheet: 77-2907.)

### GROUNDING THE BINKS PUMP

#### **⚠ WARNING**

To prevent static charging igniting the flammable spray material, the BINKS pump must be grounded before it is started up. A grounding cable is included with the pump.

1. Clamp the grounding cable to the terminal on the high pressure filter or the air motor.
2. Connect the other end of the grounding cable to a suitable grounding device (e.g. grounding bar).

### PREPARING TO START UP THE BINKS PUMP

Proceed as follows:

1. Check that the solvent cup (0115-010059) is full to the level shown. If necessary, add material to the solvent cup. (Order part no. 0114-009433 for solvent based paint, and part no. 0114-014871 for waterborne paint.)



2. Select a suitable filter element using the table in this manual (page 10) and insert it into to the high pressure filter (0115-010326).
3. Attach a suitable fluid hose to the outlet fitting (0114-016059) on the high pressure filter (0115-010326).

#### **⚠ WARNING**

The fluid hose supplied by BINKS is identified with the maximum permitted working pressure and the bursting pressure. The lesser value—the maximum permitted working pressure—must be greater than the maximum permitted working pressure of the pump.

4. Connect the gun—designed at least for the maximum permitted working pressure of the pump—to the fluid hose (71-4830).
5. Make sure that the ball valve on the air control assembly is closed.
6. Connect the compressed air supply to the air inlet connection.
7. The pump is equipped with an air pressure regulator (0115-010183). Before putting the pressure line

into operation, relieve the pressure regulator by fully unscrewing the regulating screw. Thereafter rotate the regulating screw clockwise until the pressure gauge (0115-010192) on the regulator indicates the required pressure.

#### **NOTE**

The pump is equipped with an air pressure safety valve (0114-014774) set at 8 bar (116 psi).

### RINSING THE BINKS PUMP

#### **⚠ WARNING**

Wear eye protection.

Every BINKS pump is tested with water during final inspection and thoroughly rinsed with a non-gumming preservative oil. With this rinsing process, it is possible that the residual moisture of water emulsion will be left in the pump.

Before the unit is started up for the first time, a suitable solvent must be used to thoroughly rinse out the remains of the preservative fluid and the unavoidable impurities introduced during equipment assembly.

Proceed as follows:

1. Prepare the BINKS pump for start-up as shown above.
2. Close the high pressure ball valve (0114-019091) on the fluid filter.
3. Immerse the siphon kit (41-17260 or 0115-010381) in the tank of solvent.
4. Insert the return flow hose (0115-010327) into the tank of solvent. Open the high pressure ball valve (0114-019091) on the fluid filter.
5. Open the ball valve and set the air regulator (0115-010183) to approximately 1 bar (14.5 psi). The siphon kit now draws in the solvent. The solvent runs back to the solvent tank through the high pressure filter (0115-010326), the high pressure ball valve (0114-019091) and the return flow hose (0115-010327).
6. Remove the spray tip from the gun and point the gun into the tank. Unlock the safety lever on the gun, operate the gun and close the high pressure ball valve. The solvent will now flow through the high pressure filter (0115-010326), the fluid hose (71-4830) and

the gun, back into the tank. The time of rinsing depends on the length of the material lines and the solubility of the spray material. We recommend a short flush with "fresh" solvent.

7. Release the gun trigger.
8. Slowly increase the pressure at the regulator to maximum working pressure while checking and testing that all lines and screw and plug caps are tightly sealed. If there are any leaks in the system, shut down the BINKS pump immediately. Only restart the BINKS pump once you have repaired the leak.
9. Reduce the air pressure at the air regulator (0115-010183) again and close the ball valve.
10. Make sure that the return flow hose (0115-010327) is still directed into the solvent tank. Carefully open the high pressure ball valve (0114-019091) to reduce the pressure in the fluid hose and in the high pressure filter.
11. Point the gun into the tank of solvent and operate the trigger, to reduce any pressure which may still exist in the fluid hose and in the gun.

#### **⚠ CAUTION**

If working with waterborne material, the BINKS pump must again be thoroughly rinsed with water before it is started up.

### START-UP

1. Prepare the BINKS pump for start-up as shown above and if necessary, rinse pump.
2. Close the high pressure ball valve (0114-019091) on the fluid filter.
3. Immerse the siphon kit (41-17260 or 0115-010381) in the spray material to be used.
4. Place the return flow hose (0115-010327) in the tank. Then open the high pressure ball valve (0114-019091).
5. Open the ball valve for the compressed air supply and use the pressure regulator (0115-010183) to set the compressed air supply to 1 bar (14.5 psi). The pump will now draw in the spray material. The spray material

(continued on next page)

## STARTUP AND OPERATION

flows back into the tank through the high pressure filter, the high pressure ball valve and the return pipe.

- Remove the spray tip from the gun and point the gun into the tank. Unlock the safety lever on the gun. Operate the gun trigger and close the high pressure ball valve (0114-019091). The spray material will now flow through the high pressure filter, the fluid hose and the gun, back into the tank.
- Release the gun trigger and set the working pressure at the regulator.

### NOTE

Before carrying out any coating work, we recommend a test spray (e.g. on to paper or wood). Only if the test gives you the desired result should you start to coat the actual object.

### WORK STOPPAGES

#### CAUTION

If working with 2-K spray material, you must note the given pot life and follow it precisely. Within this time, the unit must be carefully cleaned and rinsed with the recommended solvent. There must be no residue left in the pump, the high pressure filter or the gun.

#### CAUTION

When work is stopped, the safety lever of the gun must be locked.

For work stoppages of between 10 and 30 minutes, please proceed as follows:

#### WARNING

Wear eye protection.

- Lock the safety lever on the gun.
- Shut off the compressed air supply by closing the ball valve.
- Briefly open the high pressure ball valve (0114-019091), taking care that the return flow hose (0115-010327) is not pointed at other people or at yourself, until the pressure has reduced. Then close the high pressure ball valve again.
- Clean the outside of the spray nozzle from spray material residue.

### SHUT-DOWN

#### CAUTION

Once work is completed, the BINKS pump must be thoroughly cleaned. Under no circumstances must you allow paint residue to dry out in the unit. To clean the pump, use a solvent appropriate to the spray material.

#### WARNING

Wear eye protection.

- Close the ball valve for the compressed air supply.
- Make sure that the flow hose (0115-010327) is still directed into the spray material tank. Carefully open the high pressure ball valve (0114-019091) to reduce the pressure in the pump and in the high pressure filter.
- Remove the spray tip from the gun.
- Point the gun into the tank of spray material and operate the trigger to reduce any pressure which may still exist in the fluid hose and in the gun.
- Lock the safety lever on the gun.
- Remove the siphon kit from the spray material.

### CLEANING YOUR BINKS PUMP

#### CAUTION

Do not allow spray material or solvent to soak into the ground.

#### WARNING

Wear eye protection.

- Clean the pump and the siphon kit from the outside. Immerse the suction system in the tank of solvent.
- Clean the fluid tip/tip system as described in the service bulletin of the spray gun. We recommend to soak the fluid tip in solvent.
- Unlock the safety lever of the gun without fluid tip. Operate the gun. Close the high pressure ball valve (0114-01909). Set the air inlet pressure to 1 bar (14.5 psi) and slowly open the ball valve. Let the solvent run through the system so that the spraying material can rinse out.
- Let the solvent run through the system for a couple of minutes until the solvent runs clear through the gun. Close the ball valve and lock the safety lever of the gun.
- Clean the gun from the outside and check the filter on the handle (if mounted).
- Clean the filter element of the high pressure filter (0115-010326).
- Clean the filter of the siphon kit.
- We recommend keeping the pump filled with liquid.

### NOTE

If the pump is not to be used for longer periods of time, we recommend flushing the system with a light, silicone-free oil.

MX432 CART MOUNTED SYSTEMS

MX432

SEALS

PL = PTFE / Leather  
 PP = PTFE  
 PU = PTFE / UHMW  
 UC = U-Cups

SPRAY GUN

0 = none  
 G = AA4400 Flat Tip  
 H = AA4400 Twist Tip  
 P = AIRLESS 75  
 T = TROPHY AA 4400 Flat Tip  
 U = TROPHY AA 4400 Twist Tip

AIR CONTROL

0 = none  
 D = Air Control

FILTER



0 = none  
 1 = 100 mesh  
 2 = 200 mesh

SIPHON

0 = none  
 S = 5 gallon  
 T = 55 gallon

HOSE

00 = none  
 25 = 25 ft / whip  
 50 = 50 ft / whip

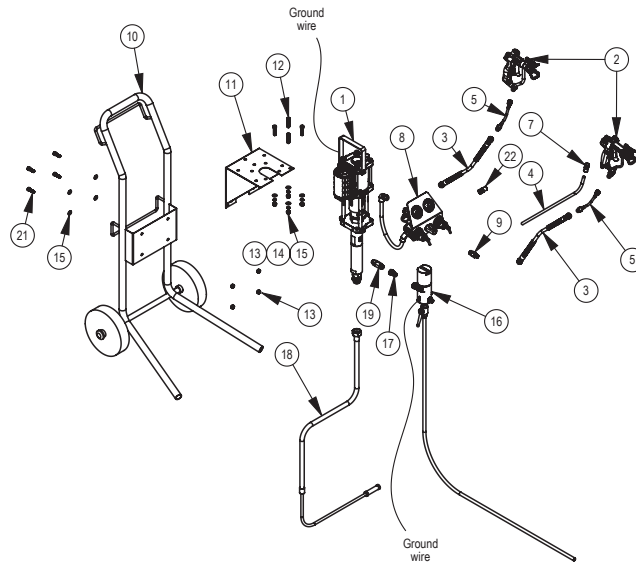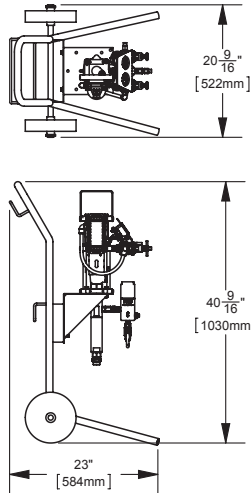

SYSTEM COMPONENT LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY	PART SHEET
1	MX432PL	BARE PUMP ASSEMBLY (PTFE/LEATHER)	1 IF SEAL TYPE = PL	77-2907
	MX432PP	BARE PUMP ASSEMBLY (PTFE)	1 IF SEAL TYPE = PP	
	MX432PU	BARE PUMP ASSEMBLY (PTFE/UHMW)	1 IF SEAL TYPE = PU	
	MX432UC	BARE PUMP ASSEMBLY (U-CUPS)	1 IF SEAL TYPE = UC	
2	0909-4400-HF0000	AA4400 GUN ASSEMBLY (FLAT TIP HOLDER)	1 IF GUN TYPE = G	77-2922
	RS-1310	FLAT SPRAY TIP (1310)	1 IF GUN TYPE = G OR T	
	0909-4400-HT0000	AA4400 GUN ASSEMBLY (TWIST TIP HOLDER)	1 IF GUN TYPE = H	77-2922
	4400-HF0000	TROPHY AA 4400 GUN (FLAT TIP)	1 IF GUN TYPE = T	77-3131
	4400-HT0000	TROPHY AA 4400 GUN (TWIST TIP)	1 IF GUN TYPE = U	
	9-613-75	TWIST SPRAY TIP (613)	1 IF GUN TYPE = H OR U	
	0811-7500-1	AIRLESS 75 GUN	1 IF GUN TYPE = P	77-2950
9-515-75	TWIST SPRAY TIP (515)	1 IF GUN TYPE = P		
3	71-4830	MATERIAL HOSE (1/4" ID X 25', 4000 PSI)	1 IF HOSE LENGTH = 25	
	71-4831	MATERIAL HOSE (1/4" ID X 50', 4000 PSI)	1 IF HOSE LENGTH = 50	
4	71-4803	AIR HOSE (3/8" OD TUBE X 28FT)	1 IF HOSE LENGTH = 25	
	71-4804	AIR HOSE (3/8" OD TUBE X 53FT)	1 IF HOSE LENGTH = 50	
5	71-6844	MATERIAL HOSE (1/8" ID X 3', 5000 PSI)	1 IF HOSE LENGTH = 25 / 50	
6	72-2332	SWIVEL ADAPTER (1/4" NPS M X F) [NOT SHOWN]	1 IF GUN TYPE = P	
7	54-4976	ADAPTER FITTING (3/8" OD TUBE X 1/4" NPS F)	1 IF GUN TYPE = G / H	
8	0115-010180	AIR CONTROL ASSEMBLY	1 IF AIR CONTROL = D	
9	83-4233	DM NIPPLE (1/4" NPS/NPT X 3/8" NPS/NPT)	1 IF AIR CONTROL = D	
10	0115-010186	TROLLEY ASSEMBLY	1	
11	0115-010179	PUMP BRACKET	1	
12	0115-010001	SOCKET HEAD CAP SCREW (M8 X 35mm)	4	
13	0115-010030	HEX NUT (M8)	8	
14	0115-010031	LOCK WASHER (M8)	4	
15	0115-010035	FLAT WASHER (M8)	8	
16	0115-010326	S.S. FILTER ASSEMBLY (100 MESH)	1 IF FILTER TYPE = 1	
	0115-010630	S.S. FILTER ASSEMBLY (200 MESH)	1 IF FILTER TYPE = 2	
17	103-1238	SWIVEL ADAPTER (3/8" NPS F X 1/4" NPT/NPS M)	1 IF NO FILTER	
18	41-17260	SIPHON TUBE ASSEMBLY (5 GALLON)	1 IF SIPHON SIZE = S	
	0115-010381	SIPHON TUBE ASSEMBLY (55 GALLON)	1 IF SIPHON SIZE = T	
20	0115-010256	CHECK VALVE	1	
21	0115-010227	SOCKET HEAD CAP SCREW (M8 X 25)	4	
22	85-521	SWIVEL ELBOW (3/8" OD TUBE X 1/4" NPT)	1 IF AIR CONTROL = D	

## MX432 WALL MOUNTED SYSTEMS

# MX432

# W

### SEALS

PL = PTFE / Leather  
 PP = PTFE  
 PU = PTFE / UHMW  
 UC = U-Cups

### SPRAY GUN

0 = none  
 G = AA4400 Flat Tip  
 H = AA4400 Twist Tip  
 P = AIRLESS 75  
 T = TROPHY AA 4400 Flat Tip  
 U = TROPHY AA 4400 Twist Tip

### AIR CONTROL

0 = none  
 D = Air Control

### FILTER




0 = none  
 1 = 100 mesh  
 2 = 200 mesh

### SIPHON

0 = none  
 S = 5 gallon  
 T = 55 gallon

### HOSE

00 = none  
 25 = 25 ft / whip  
 50 = 50 ft / whip

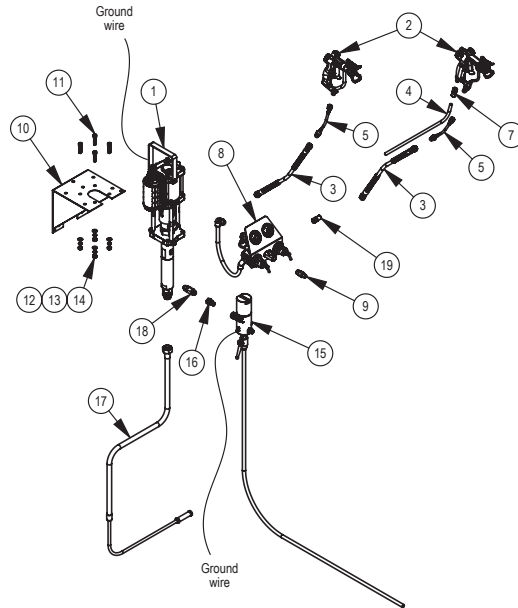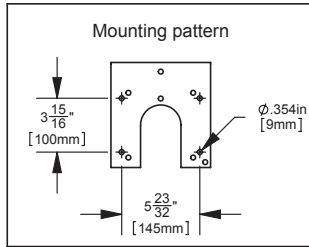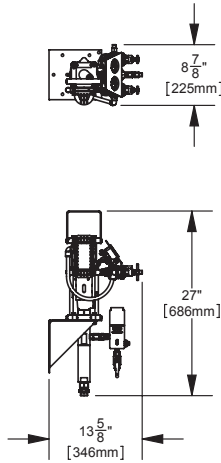

## SYSTEM COMPONENT LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY	PART SHEET
1	MX432PL	BARE PUMP ASSEMBLY (PTFE/LEATHER)	1 IF SEAL TYPE = PL	77-2907
	MX432PP	BARE PUMP ASSEMBLY (PTFE)	1 IF SEAL TYPE = PP	
	MX432PU	BARE PUMP ASSEMBLY (PTFE/UHMW)	1 IF SEAL TYPE = PU	
	MX432UC	BARE PUMP ASSEMBLY (U-CUPS)	1 IF SEAL TYPE = UC	
2	0909-4400-HF0000	AA4400 GUN ASSEMBLY (FLAT TIP HOLDER)	1 IF GUN TYPE = G	77-2922
	RS-1310	FLAT SPRAY TIP (1310)	1 IF GUN TYPE = G OR T	
	0909-4400-HT0000	AA4400 GUN ASSEMBLY (TWIST TIP HOLDER)	1 IF GUN TYPE = H	77-2922
	4400-HF0000	TROPHY AA 4400 GUN (FLAT TIP)	1 IF GUN TYPE = T	77-3131
	4400-HT0000	TROPHY AA 4400 GUN (TWIST TIP)	1 IF GUN TYPE = U	
	9-613-75	TWIST SPRAY TIP (613)	1 IF GUN TYPE = H OR U	
	3	0811-7500-1	AIRLESS 75 GUN	1 IF GUN TYPE = P
9-515-75		TWIST SPRAY TIP (515)	1 IF GUN TYPE = P	
71-4830		MATERIAL HOSE (1/4" ID X 25', 4000 PSI)	1 IF HOSE LENGTH = 25	
4	71-4831	MATERIAL HOSE (1/4" ID X 50', 4000 PSI)	1 IF HOSE LENGTH = 50	
	71-4803	AIR HOSE (3/8" OD TUBE X 28FT)	1 IF HOSE LENGTH = 25	
5	71-4804	AIR HOSE (3/8" OD TUBE X 53FT)	1 IF HOSE LENGTH = 50	
	71-6844	MATERIAL HOSE (1/8" ID X 3', 5000 PSI)	1 IF HOSE LENGTH = 25 / 50	
6	72-2332	SWIVEL ADAPTER (1/4" NPS M X F) [NOT SHOWN]	1 IF GUN TYPE = P	
7	54-4976	ADAPTER FITTING (3/8" OD TUBE X 1/4" NPS F)	1 IF GUN TYPE = G / H	
8	0115-010180	AIR CONTROL ASSEMBLY	1 IF AIR CONTROL = D	
9	83-4233	DM NIPPLE (1/4" NPS/NPT X 3/8" NPS/NPT)	1 IF AIR CONTROL = D	
10	0115-010179	PUMP BRACKET	1	
11	0115-010001	SOCKET HEAD CAP SCREW (M8 X 35mm)	4	
12	0115-010030	HEX NUT (M8)	4	
13	0115-010031	LOCK WASHER (M8)	4	
14	0115-010035	FLAT WASHER (M8)	4	
15	0115-010326	S.S. FILTER ASSEMBLY (100 MESH)	1 IF FILTER TYPE = 1	
	0115-010630	S.S. FILTER ASSEMBLY (200 MESH)	1 IF FILTER TYPE = 2	
16	103-1238	SWIVEL ADAPTER (3/8" NPS F X 1/4" NPT/NPS M)	1 IF NO FILTER	
17	41-17260	SIPHON TUBE ASSEMBLY (5 GALLON)	1 IF SIPHON SIZE = S	
	0115-010381	SIPHON TUBE ASSEMBLY (55 GALLON)	1 IF SIPHON SIZE = T	
18	0115-010256	CHECK VALVE	1	
19	85-521	SWIVEL ELBOW (3/8" OD TUBE X 1/4" NPT)	1 IF AIR CONTROL = D	



## MX432 TRIPOD MOUNTED SYSTEMS

# MX432

# T

### SEALS

PL = PTFE / Leather  
 PP = PTFE  
 PU = PTFE / UHMW  
 UC = U-Cups

### SPRAY GUN

0 = none  
 G = AA4400 Flat Tip  
 H = AA4400 Twist Tip  
 P = AIRLESS 75  
 T = TROPHY AA 4400 Flat Tip  
 U = TROPHY AA 4400 Twist Tip

### AIR CONTROL

0 = none  
 D = Air Control

### FILTER




0 = none  
 1 = 100 mesh  
 2 = 200 mesh

### SIPHON

0 = none  
 S = 5 gallon  
 T = 55 gallon

### HOSE

00 = none  
 25 = 25 ft / whip  
 50 = 50 ft / whip

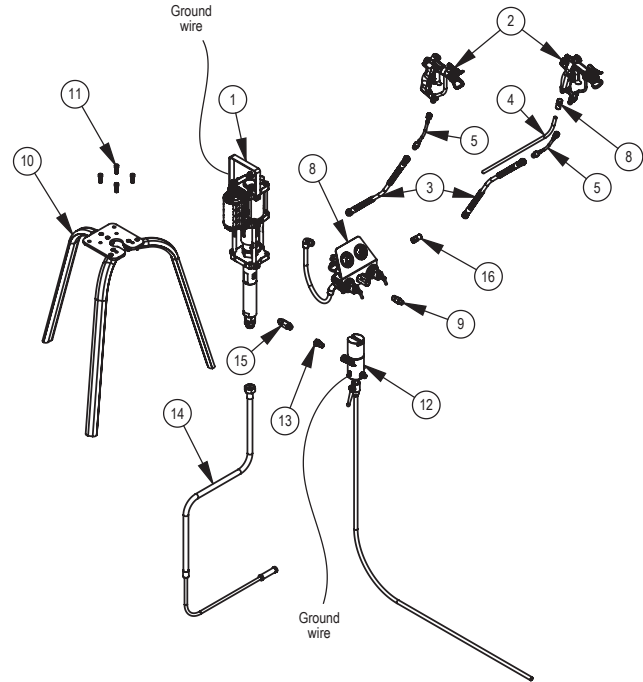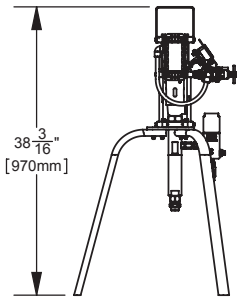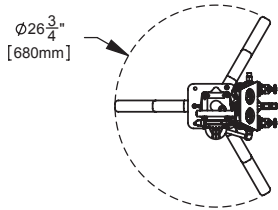

## SYSTEM COMPONENT LIST


ITEM NO.	PART NUMBER	DESCRIPTION	QTY	PART SHEET
1	MX432PL	BARE PUMP ASSEMBLY (PTFE/LEATHER)	1 IF SEAL TYPE = PL	77-2907
	MX432PP	BARE PUMP ASSEMBLY (PTFE)	1 IF SEAL TYPE = PP	
	MX432PU	BARE PUMP ASSEMBLY (PTFE/UHMW)	1 IF SEAL TYPE = PU	
	MX432UC	BARE PUMP ASSEMBLY (U-CUPS)	1 IF SEAL TYPE = UC	
2	0909-4400-HF0000	AA4400 GUN ASSEMBLY (FLAT TIP HOLDER)	1 IF GUN TYPE = G	77-2922
	RS-1310	FLAT SPRAY TIP (1310)	1 IF GUN TYPE = G OR T	
	0909-4400-HT0000	AA4400 GUN ASSEMBLY (TWIST TIP HOLDER)	1 IF GUN TYPE = H	77-2922
	4400-HF0000	TROPHY AA 4400 GUN (FLAT TIP)	1 IF GUN TYPE = T	77-3131
	4400-HT0000	TROPHY AA 4400 GUN (TWIST TIP)	1 IF GUN TYPE = U	
	9-613-75	TWIST SPRAY TIP (613)	1 IF GUN TYPE = H OR U	
	0811-7500-1	AIRLESS 75 GUN	1 IF GUN TYPE = P	77-2950
9-515-75	TWIST SPRAY TIP (515)	1 IF GUN TYPE = P		
3	71-4830	MATERIAL HOSE (1/4" ID X 25', 4000 PSI)	1 IF HOSE LENGTH = 25	
	71-4831	MATERIAL HOSE (1/4" ID X 50', 4000 PSI)	1 IF HOSE LENGTH = 50	
4	71-4803	AIR HOSE (3/8" OD TUBE X 28FT)	1 IF HOSE LENGTH = 25	
	71-4804	AIR HOSE (3/8" OD TUBE X 53FT)	1 IF HOSE LENGTH = 50	
5	71-6844	MATERIAL HOSE (1/8" ID X 3', 5000 PSI)	1 IF HOSE LENGTH = 25 / 50	
6	72-2332	SWIVEL ADAPTER (1/4" NPS M X F) [NOT SHOWN]	1 IF GUN TYPE = P	
7	54-4976	ADAPTER FITTING (3/8" OD TUBE X 1/4" NPS F)	1 IF GUN TYPE = G / H	
8	0115-010180	AIR CONTROL ASSEMBLY	1 IF AIR CONTROL = D	
9	83-4233	DM NIPPLE (1/4" NPS/NPT X 3/8" NPS/NPT)	1 IF AIR CONTROL = D	
10	0115-010100	TRIPOD ASSEMBLY	1	
11	0115-010227	SOCKET HEAD CAP SCREW (M8 X 25mm)	4	
12	0115-010326	S.S. FILTER ASSEMBLY (100 MESH)	1 IF FILTER TYPE = 1	
	0115-010630	S.S. FILTER ASSEMBLY (200 MESH)	1 IF FILTER TYPE = 2	
13	103-1238	SWIVEL ADAPTER (3/8" NPS F X 1/4" NPT/NPS M)	1 IF NO FILTER	
14	41-17260	SIPHON TUBE ASSEMBLY (5 GALLON)	1 IF SIPHON SIZE = S	
	0115-010381	SIPHON TUBE ASSEMBLY (55 GALLON)	1 IF SIPHON SIZE = T	
15	0115-010256	CHECK VALVE	1	
17	85-521	SWIVEL ELBOW (3/8" OD TUBE X 1/4" NPT)	1 IF AIR CONTROL = D	

## STAINLESS STEEL HIGH PRESSURE FILTER ASSEMBLIES

0115-010326 (100 MESH FILTER ELEMENT)  
 0115-010630 (200 MESH FILTER ELEMENT)

SPECIFICATIONS	
Max working pressure:	272 bar [3945 psi]
Fluid inlet connection:	3/8" BSP (f)
Fluid outlet connection:	1/4" NPS (m)
Wetted parts materials of construction:	Stainless Steel, PTFE


Additional filter mesh sizes (sold separately):  
 For 50 mesh order: 0110-009131

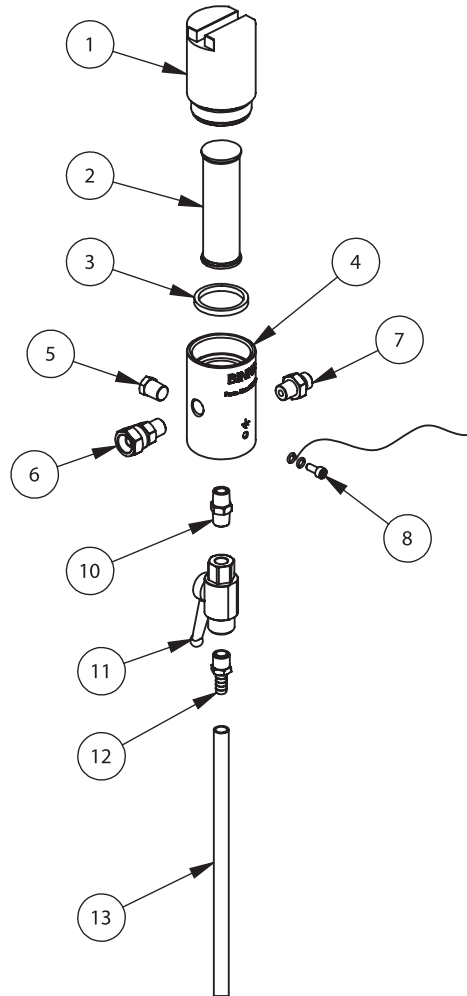

### PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	0115-010326 QTY	0115-010630 QTY
1	0115-010399	FILTER CAP	1	1
2	0110-009134	200 MESH FILTER ELEMENT	0	1
	0110-009132	100 MESH FILTER ELEMENT	1	0
3	0114-016061	GASKET	1	1
4	0115-010398	FILTER HOUSING	1	1
5	0115-010600	PLUG	1	1
6	0114-016058	SWIVEL CONNECTING NIPPLE	1	1
7	0114-016059	OUTLET SCREW	1	1
8	0114-016243	GROUND WIRE KIT	1	1
10	0114-019090	OUTFLOW FITTING	1	1
11	0114-019091	HIGH PRESSURE BALL VALVE	1	1
12	0114-019985	HOSE CONNECTION	1	1
13	0115-010327	FILTER DRAIN HOSE	1	1

SYSTEM ACCESSORIES

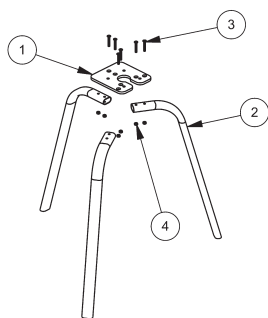


0115-010100 TRIPOD ASSEMBLY

PARTS LIST

When ordering, please specify Part No.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	0115-010101	PUMP MOUNTING PLATE .....	1
2	0115-010210	TRIPOD LEG .....	3
3	0115-010212	FLAT HEAD SCREW.....	6
4	0115-010211	SELF LOCKING NUT .....	6

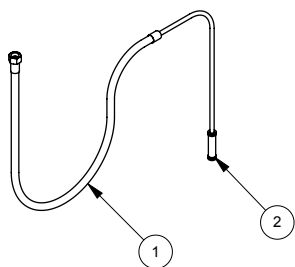


41-17238 5-GALLON SIPHON KIT (1/2" NPS)

PARTS LIST

When ordering, please specify Part No.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	41-17239	S.S. 5-GALLON SIPHON HOSE ASSY.....	1
2	41-17241-K2	50 MESH INLET FILTER (2 PACK).....	1

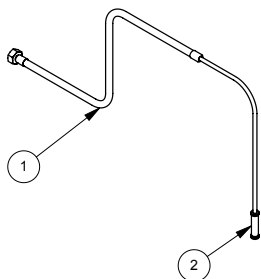


41-17260 5-GALLON SIPHON KIT (3/4" NPS)

PARTS LIST

When ordering, please specify Part No.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	41-17261	S.S. 5-GALLON SIPHON HOSE ASSY.....	1
2	41-17241-K2	50 MESH INLET FILTER (2 PACK).....	1

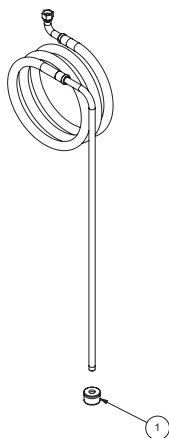


0115-010381 55-GALLON SIPHON KIT

PARTS LIST

When ordering, please specify Part No.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	41-2661	1/2 NPSM x 30 MESH S.S. STRAINER....	1

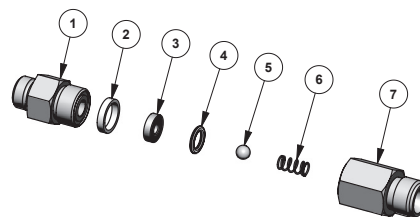

0115-010256 CHECK VALVE ASSEMBLY


PARTS LIST

When ordering, please specify Part No.


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	0115-010258	FLUID OUTLET FITTING .....	1
2	0115-010259	CHECK SEAL.....	1
3	0115-010066	SEAT .....	1
4	0115-010065	SEAT SEAL.....	1
5	0114-014745	BALL, 6mm diameter .....	1
6	0115-010087	SPRING .....	1
7	0115-010257	VALVE HOUSING.....	1

• Parts are included in Repair Kits:  
 0115-010222 (FX4 w/PTFE & Leather)  
 0115-010224 (FX4 w/PTFE)  
 0115-010388 (FX4 w/PTFE & UHMW)  
 0115-010220 (FX4 w/U-cups)


ACCESSORIES FOR YOUR MX432 PUMP

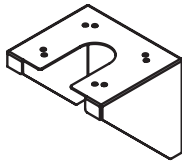


BRACKET  
0115-010179

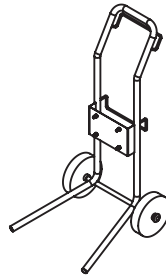


TROLLEY ASSEMBLY  
0115-010186

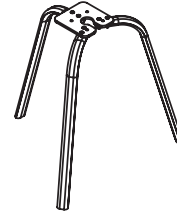

TRIPOD ASSEMBLY  
0115-010100

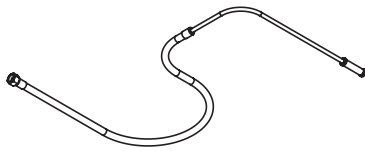

SIPHON KITS  
41-17238 (5 GAL) 1/2" NPS  
41-17260 (5 GAL) 3/4" NPS  
0115-010381 (55 GAL)

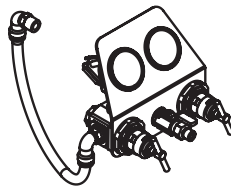

AIR CONTROLS  
0115-010180



FLUID FILTER (100 MESH)  
0115-010326

FLUID FILTER (200 MESH)  
0115-010630



LUBRICATING OIL FOR  
FX4 FLUID PUMP  
0114-009433 (Solvent Based Materials)  
0114-014871 (Water Based Materials)

NOTES

---

## WARRANTY POLICY

Binks products are covered by Carlisle Fluid Technologies one year materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Carlisle Fluid Technologies, will void all warranties. For specific warranty information please contact the closest Carlisle Fluid Technologies location listed below.

Carlisle Fluid Technologies reserves the right to modify equipment specifications without prior notice. DeVilbiss®, Ransburg®, ms®, BGK®, and Binks® are registered trademarks of Carlisle Fluid Technologies, Inc.

©2018 Carlisle Fluid Technologies, Inc.  
All rights reserved.

---

Binks is part of Carlisle Fluid Technologies, a global leader in innovative finishing technologies. For technical assistance or to locate an authorized distributor, contact one of our international sales and customer support locations.

**USA/Canada**

info@carlisleleft.com  
Tel: 1-888-992-4657  
Fax: 1-888-246-5732

**China**

mkt@carlisleleft.com.cn  
Tel: +8621-3373 0108  
Fax: +8621-3373 0308

**Germany**

info@carlisleleft.eu  
Tel: +49 (0) 6074 403 1  
Fax: +49 (0) 6074 403 281

**United Kingdom**

info@carlisleleft.eu  
Tel: +44 (0)1202 571 111  
Fax: +44 (0)1202 573 488

**Mexico**

ventas@carlisleleft.com.mx  
Tel: +52 55 5321 2300  
Fax: +52 55 5310 4790

**Australia**

sales@carlisleleft.com.au  
Tel: +61 (0) 2 8525 7555  
Fax: +61 (0) 2 8525 7575

**Japan**

overseas-sales@carlisleleft.co.jp  
Tel: +81 45 785 6421  
Fax: +81 45 785 6517

For the latest information about our products, visit [www.carlisleleft.com](http://www.carlisleleft.com).